


Panasonic

Video Cassette Recorder

NV-HD630 Series

Operating Instructions

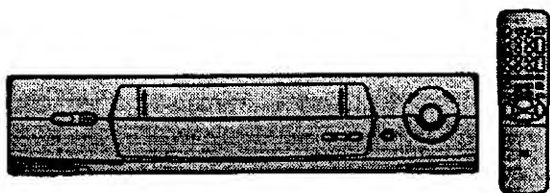

G-CODE®

VHS
PAL NTSC

SUPER DRIVE
MULTI-INTELLIGENT CONTROL II

VQT8153

Before attempting to connect, operate or adjust this product, please read these instructions completely.

Dear Customer

Thank you for purchasing this Panasonic Video Cassette Recorder.



We strongly suggest that you carefully study the Operating Instructions before attempting to operate the VCR, and that you note the listed precautions.

G-Code Programming System

Programming is now easier than ever; simply enter the G-Code number found in the programme scheduling pages of newspapers and magazines.

- G-CODE is a registered trademark of Gemstar Development Corporation. The G-CODE system is manufactured under license from Gemstar Development Corporation.

Plug in Auto Tuning (NV-HD630EA only)

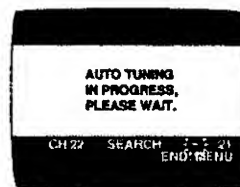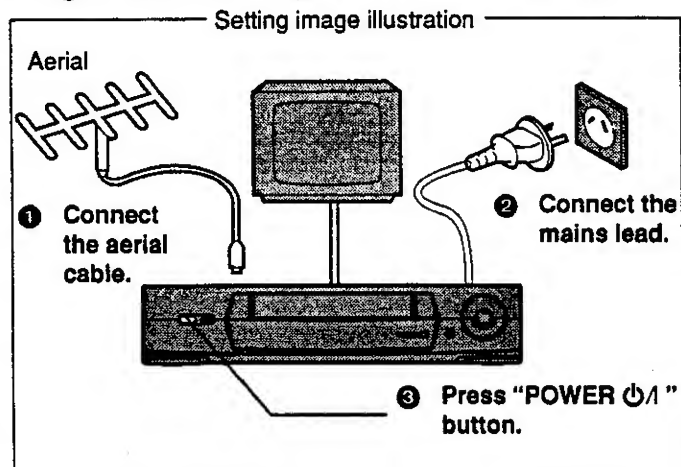

Plug In Auto Tuning is completed.

All broadcasting stations that can be received in the area are automatically tuned and stored in memory.

- Do not turn off the VCR halfway. (See page 12.)

As this equipment gets hot during use, operate it in well ventilated place; do not install this equipment in a confined space such as a book case or similar unit.

FOR YOUR SAFETY

■ DO NOT REMOVE OUTER COVER.

To prevent electric shock, do not remove cover.
No user serviceable parts inside. Refer servicing to qualified service personnel.

WARNING

TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

IMPORTANT

Your attention is drawn to the fact that recording of pre-recorded tapes or discs or other published or broadcast material may infringe copyright laws.

NV-HD630A: Australian model
NV-HD630EA: New Zealand model

Contents

Before Use

Controls and Connection Sockets	4
Infra-red Remote Controller	6
Remote Controller Setup	8

Setting Up

Connections	9
Tuning the TV to your VCR	10
Storing TV Broadcasts in your VCR	12
Setting the Remote Controller for Operation of your TV	16
Language Setting of the On Screen Display	17
Setting the Clock of your VCR	18
Preparations for G-Code Programming	19
Settings Using the On Screen Display	21
• Option Setting	22

Basic Operations

Playback	24
Manual Recording	26
• One-Touch Recording (OTR)	28

Advanced Operations

Timer Recording	29
• 4-Key Programming	29
• G-Code Programming	32
Search Functions	33
• Programme List Search	33
• VHS Index Search System	34
• Intro-Jet Scan	34
Making a copy	35
• Copying	35
Other Functions	36
• Child Lock Function	36
• NTSC Playback	36
• Other Automatic Functions	36


Helpful Hints

Before Requesting Service	37
Usage Precautions	39


Specifications	Back Cover
----------------------	------------

Controls and Connection Sockets

This section describes in detail the function of each button, switch and connection socket.

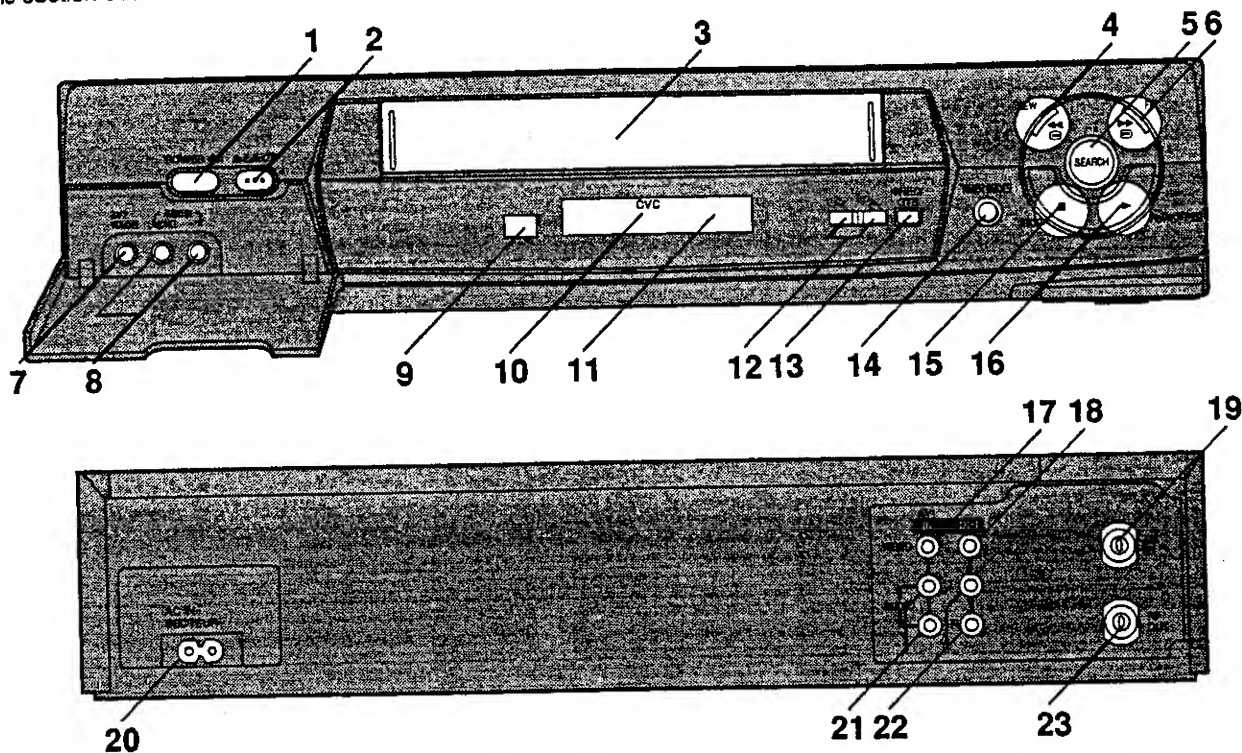

Set VCR--TV switch to VCR for using POWER and the and buttons.

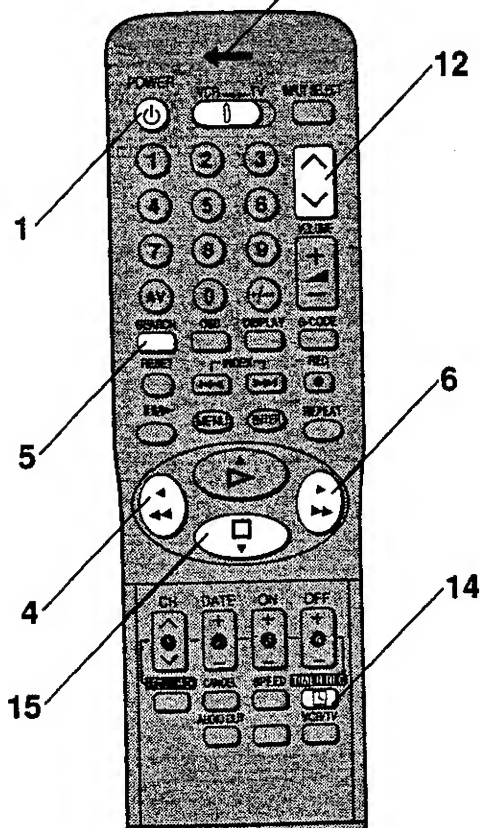

FRONT

1 POWER (POWER)

Press to switch the VCR from on to standby mode or vice versa. In standby mode, the VCR is still connected to the mains.

Set VCR--TV switch to VCR for using POWER of remote controller.

2 EJECT

Ejects a video cassette.

3 Cassette Compartment

Insert a video cassette here.

4 REW (REWIND)

In the stop mode:
In the playback mode:
In the rewind mode:
"◀◀" is lit.

Rewinds the tape.
Searches back.
Obtains high speed picture.

5 SEARCH

Searches a recorded programme using the programme list search after timer recording and using the intro-jet scan functions.

6 FF (FAST FORWARD)

In the stop mode:
In the playback mode:
In the fast forward mode:
"▶▶" is lit.

Fast forwards the tape.
Searches forward.
Obtains high speed picture.

7 VIDEO IN (AV2)

Connects a video cable from a movie camera or another unit.

8 AUDIO IN (AV2)

Connects an audio cable from a movie camera or another unit.

9 Infra-red Remote Control Receiver Window

10 CVC (Crystal View Control) Indicator

This indicator is lit when the VCR is on.


 
11 Display

12


 
Selects the required programme position (TV station) of the VCR.

For tracking adjustment and vertical locking adjustment.


 
• For manual tracking adjustment

The  and  buttons are used to adjust the tracking when, for example, noise bars on the picture during normal playback are better removed manually than by automatic digital tracking control. To return to automatic digital tracking control, press both buttons together.

• For slow tracking adjustment

When noise bars appear during still or slow playback, switch over to slow playback and adjust with the  or  button to reduce the noise bars.

• For vertical locking adjustment

Use the  and  buttons to minimize any vertical jitter during still picture playback.

Set VCR/TV switch to VCR for using the  and  buttons of remote controller.


13 REC/OTR

Starts recording.

For One-Touch Recording (OTR).

14 TIMER REC

Turns the timer recording function on and off.

 is lit or not lit.

Once you operate the timer recording function, normal VCR operation is not possible unless you press this button again and release the VCR from the timer recording standby mode.

15 STOP (□)

Stops playback or recording.

Ejects the video cassette.

16 PLAY/OFF

Starts playback. "" is lit.

For the Play-Off Timer function.

REAR

17 VIDEO IN (AV1)

Connects a video cable from a movie camera or another unit.

18 VIDEO OUT

Connects a video cable to a TV or another unit.

19 RF IN

Connects the external aerial.

20 AC IN~

Connects the main power supply.

21 AUDIO IN (AV1)

Connects an audio cable from a movie camera or another unit.

22 AUDIO OUT

Connects an audio cable to a TV or another unit.


23 RF OUT

Connects the aerial terminal on a TV.

The remote control unit for this VCR is a universal remote controller. As such, some of its buttons are not used to operate this VCR.

VCR OPERATION

Set VCR/TV switch to VCR for using the numeric buttons and the G-CODE button.

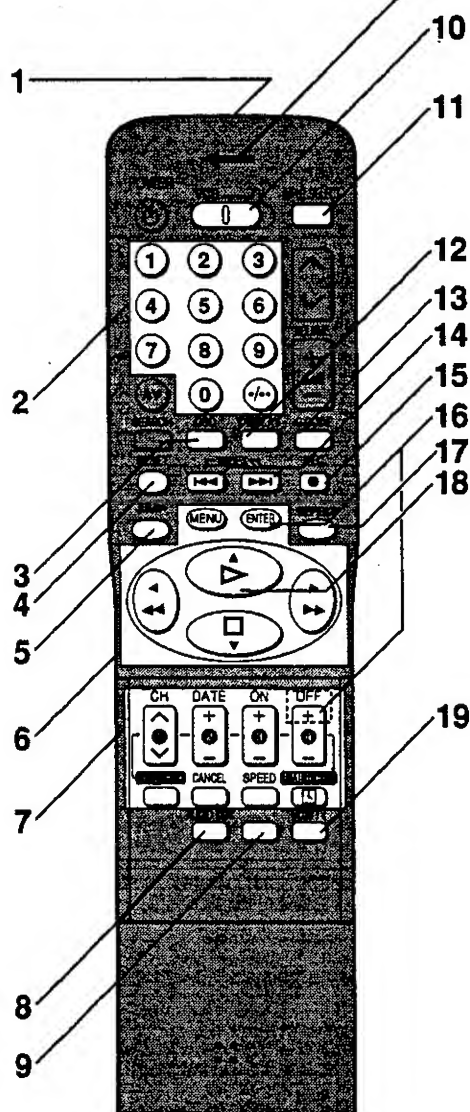

1 Infra-red Transmitter

2 Numeric Buttons

Selects programme positions (1-99) of the VCR.
 •Ensure that VCR—TV switch is set to VCR.

9: 9

19: 1 → 9

Programmes G-Code numbers.

•Ensure that VCR—TV switch is set to VCR.

3 OSD

For the On Screen Display Function.

4 RESET

Resets the tape counter (elapsed time) to "0:00.00".
 •The tape counter is automatically reset to "0:00.00" when a video cassette is inserted.

5 II/▶ (PAUSE/SLOW)

During playback:

- By pressing: Still picture. "II" is lit.
- By pressing for 2 seconds or more: Slow playback. "II>" is lit.

During recording: Interrupts recording.

6 On Screen Display Menu Operation Buttons

MENU:

Makes the on screen display main menu appear on the TV screen.

ENTER:

Confirms the selection, or stores.

▲ ▼ ◀ ▶:

Makes selections from the on screen display.

•These buttons can also be used for playback, stop, rewind and fast forward mode.

7 Timer Recording Operation Buttons

CH, DATE, ON, OFF:

Programmes a timer recording.

PROG./CHECK:

Sets and checks timer programmes.

CANCEL:

Cancels the settings made for timer recording.

SPEED:

Selects the desired tape speed for recording.

SP gives the best picture quality.

LP (EP) gives the longest recording time.

•The indicator (SP, LP or EP) corresponding to the selected tape speed now appears on the VCR display or on screen display.

LP: This appears when PAL/MESECAM signals are input or output.

EP: This appears when NTSC signals are input or output.

TIMER REC []:

Turns the timer recording function on and off.

[] is lit or not lit.

Once you operate the timer recording function, normal VCR operation is not possible unless you press this button again and release the VCR from the timer recording standby mode.

8 AUDIO OUT

This button is not used to operate this VCR.

9 No function.

This button is not used to operate this VCR.

10 VCR--TV switch

VCR: Selects the VCR operation mode.

TV: Selects the TV operation mode.

11 INPUT SELECT

Selects the A1 or A2 external recording source.

12 DISPLAY

Changes the indication on the VCR display or on screen display as follows.

→Clock→Counter→Remaining Tape Time

13 G-CODE

Used for G-Code programming.

•Ensure that **VCR--TV** switch is set to **VCR**.

14 INDEX ⏮, ⏭

Used for the index search function.

15 REC ●

Starts recording.

16 Child Lock Function Buttons

ENTER, OFF (+):

Deactivates all buttons on the VCR and the remote control by holding down **ENTER** and **OFF (+)** simultaneously until the "▷◁ hold" indication appears in the VCR display.

17 REPEAT

For the repeat playback function.

18 ▷ (PLAY)

Starts playback. "▷" is lit.


For the repeat playback function.

19 VCR/TV

This button is not used to operate this VCR.

TV OPERATION

Set **VCR--TV** switch to **TV** for using **POWER** ⏻, the **▽** and **△** buttons and the **numeric** buttons.

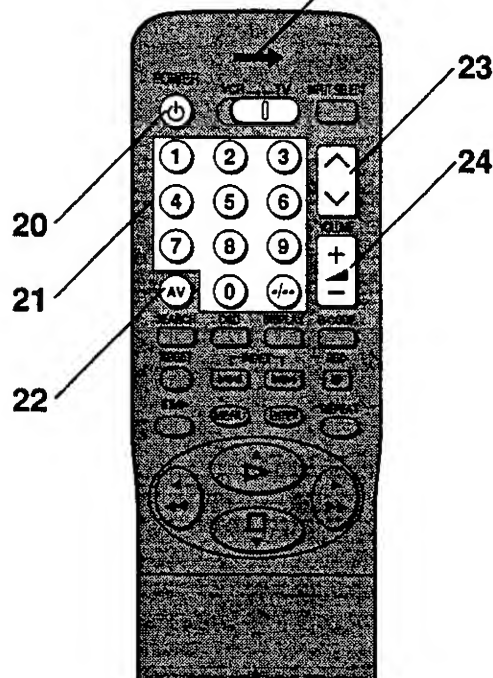

20 POWER ⏻

Press to switch the TV from on to standby mode or vice versa. In standby mode, the TV is still connected to the mains.

•With some TV models, it may only be possible to switch the TV to the standby mode using this button. In this case, use **AV** or the **▽** and **△** buttons to switch the TV on.

•Ensure that **VCR--TV** switch is set to **TV**.

21 Numeric Buttons

Selects programme positions (1-99) of the TV.

•Ensure that **VCR--TV** switch is set to **TV**.

22 AV

Selects TV input or AV input.

23 ▽ △

Selects the required programme position (TV station) of the TV.

•Ensure that **VCR--TV** switch is set to **TV**.


24 VOLUME - ▴ +

Adjusts the volume of the TV.


Remote Controller Setup

Installing the Batteries

- 1 To remove the cover, slide it in the direction of the arrow while pressing down.

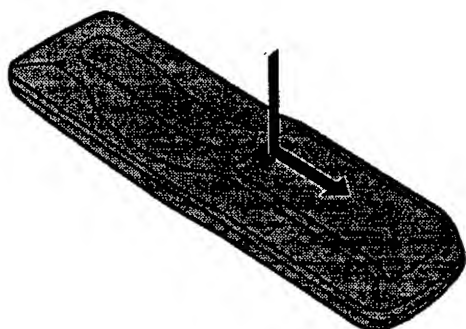

- 2 Load the batteries with their polarity (\oplus and \ominus) aligned correctly.

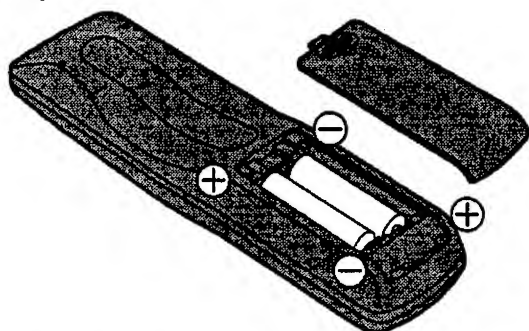

- 3 Slide the cover back on.

Power Source for the Remote Controller

The remote controller is powered by 2 "AA", "UM3" or "R6" size batteries. The life of the batteries is about one year, although this depends on the frequency of use.



Precautions for Battery Replacement

- Load the new batteries with their polarity (\oplus and \ominus) aligned correctly.
- Do not apply heat to the batteries, or an internal short circuit may occur.
- If you do not intend to use the remote controller for a long period of time, remove the batteries and store them in a cool and dry place.
- Remove spent batteries immediately and dispose of them.
- Do not use an old and a new battery together, and never use an alkaline battery with a manganese battery.
- Do not use rechargeable batteries.

If the Sliding Cover of the Remote Controller becomes Detached

If the sliding cover of remote controller becomes detached by mistake, fit it securely in place by putting it on top of the remote controller and pushing it down until it clicks into position, as shown in the figure below.

- It is not possible to fit the sliding cover in place by pushing it from the bottom end of the remote controller. Do not attempt to do this.

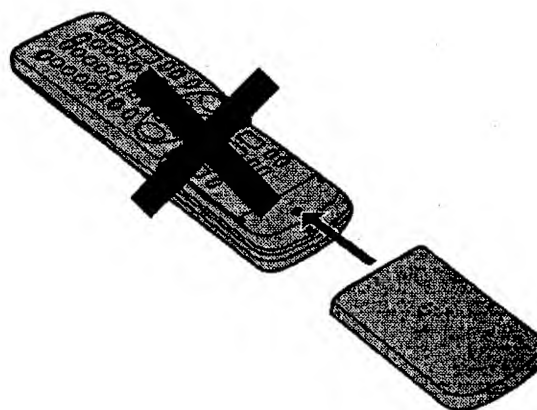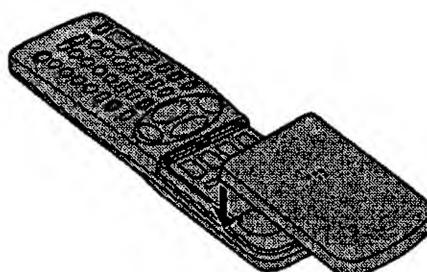


Connections

This section shows you how to connect the VCR to an aerial, TV, etc.

When the VCR is turned on after unpacking and connecting the aerial cable and the mains lead, Plug in Auto Tuning starts automatically.
(NV-HD630EA only)


Basic Connections

The following connections are required to record and play back the video cassette through the TV.

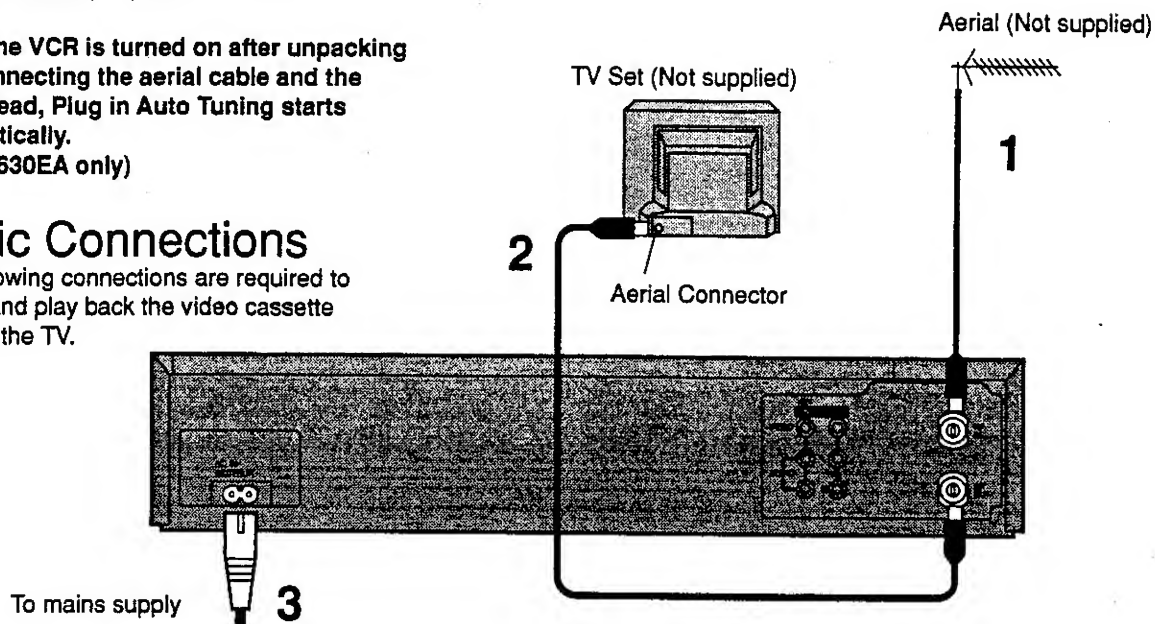


Connection to a TV using the Audio/Video Input Sockets


Set the RF output channel of the VCR to "—" (RF OFF) when the VCR is connected to the TV via the AUDIO VIDEO cable.

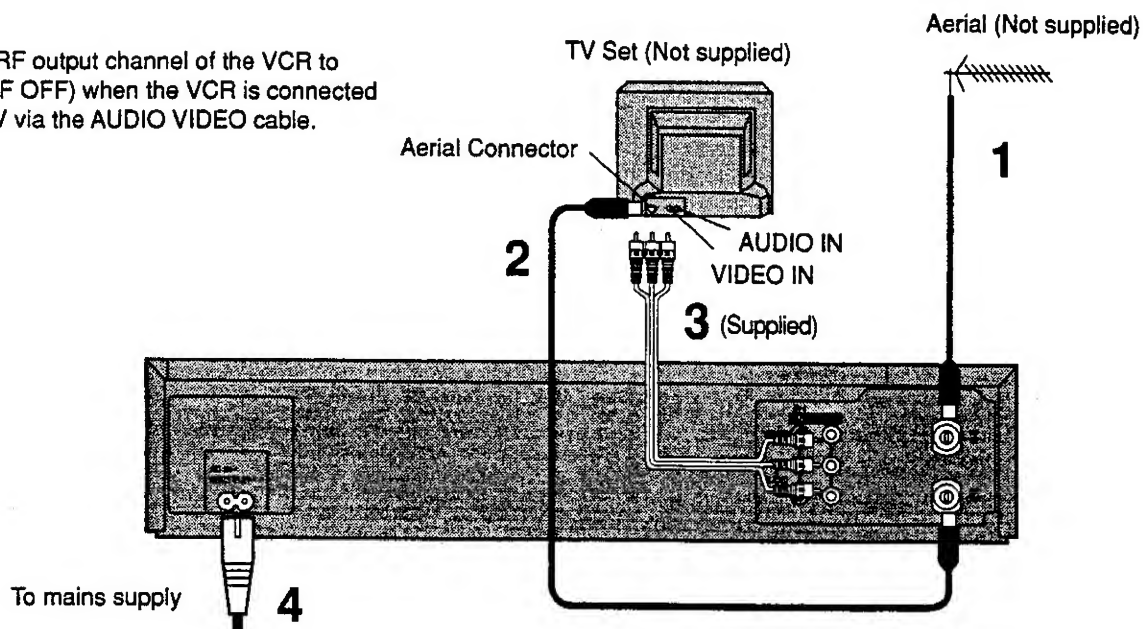

Connection to a Stereo Amplifier

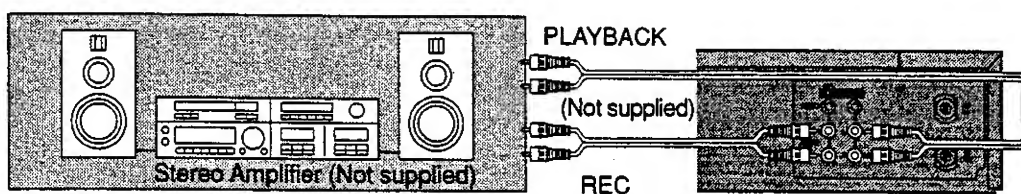

Tuning the TV to your VCR

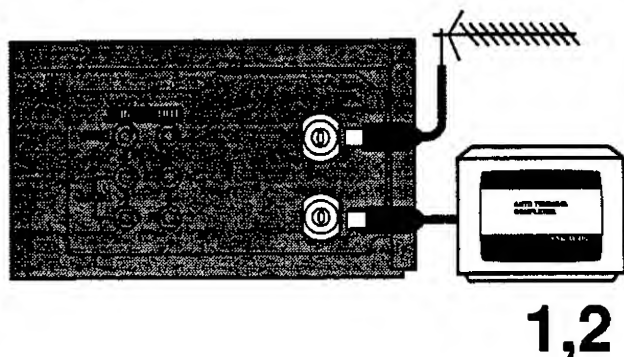


The VCR supplies a signal to the TV via the RF coaxial cable on channel AU28-69, or NZ21-69. It is possible to view the video picture on your TV in the same way that you watch TV broadcasts. If you have connected the VCR to the TV through the video and audio input sockets, then you do not need to follow the procedure below.

When the VCR is turned on after unpacking and connecting the aerial cable and the mains lead, Plug in Auto Tuning starts automatically. (NV-HD630EA only)

Notes:

- If the VCR is turned on with the aerial not connected, all channels are skipped. Therefore, firmly connect the aerial and then turn the VCR off and on again to execute Auto Tuning.

- When Auto Tuning is cancelled halfway, Auto Tuning is not executed even if the VCR is turned off and then turned on again. In this case, see page 12 "To restart Plug in Auto Tuning". (NV-HD630EA only)

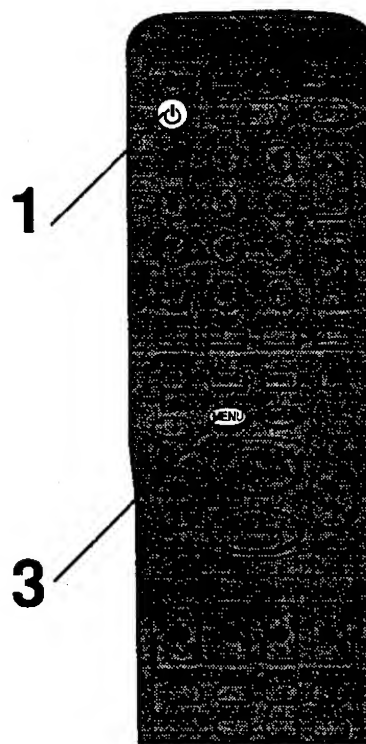

Operations



Turn on the TV and the VCR.



Set the TV to an unused position which you wish to use for your video playback.

For NV-HD630EA



On Screen Display



For NV-HD630A

- Tune the TV until the TV programme screen appears. (Please refer to the TV manufacturers operating instructions regarding tuning.)

For NV-HD630EA

- Tune the TV until the display shown on the left appears on the screen. (Please refer to the TV manufacturers operating instructions regarding tuning.)

(During Plug in Auto Tuning) · (After Plug in Auto Tuning)



Press **MENU**.

- This operation is not necessary for NV-HD630A.


To Change the RF output Channel

In some rare cases after tuning the TV to your VCR, interference may be visible on the picture. To get rid of this interference, you can manually adjust the RF output channel a few channels up and down from the current setting. The procedure is described below.

Operations

1 Hold down **MENU** for 5 seconds or more.


- The VCR display changes as shown below and the VCR picture on the TV displays this pattern.

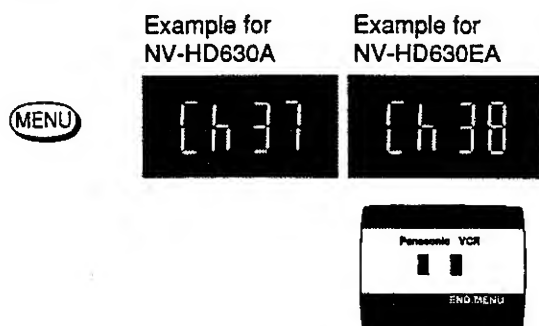

2 Enter the desired channel number (AU28-69, NZ21-69) by using the **numeric buttons** or the **▼** and **▲** buttons.

- ≥ Ensure that **VCR—TV** switch is set to **VCR**.
- ≥ Set the RF output channel of the VCR to "—" (RF OFF) when the VCR is connected to the TV via the **AUDIO VIDEO** cable.

 Press the **▼** and **▲** buttons to display "—".



Example:

28: **▼** → **2** → **8**



3 Press **MENU** to finish the setting mode.



4 Retune your TV to the new RF channel for the VCR.

Note:

Even if the RF output channel has been changed, it is not necessary to perform Auto Tuning.

Storing TV Broadcasts in your VCR

The VCR is fitted with its own tuner (just like a normal TV) and can be preset to receive up to 99 TV broadcast stations.

Pre-programmed TV Channels (NV-HD630A only)

The local TV broadcast channels 2, 7, 9, 10 and 28 are factory-preset in this VCR.

That is, if you can receive television broadcasts on VHF channels 2, 7, 9, 10 and UHF channel 28, these are already tuned on the programme positions with the matching numbers. However, it is possible to cancel these settings and tune the local TV broadcast channels to any desired programme position.

For alternative settings and tuning of additional TV broadcast channels, follow the Tuning Operations.

Plug in Auto Tuning (NV-HD630EA only)

When the VCR is turned on after connecting the aerial cable and the mains lead, Auto Tuning starts.

On Screen Display



Auto Tuning searches for TV stations from VHF minimum to UHF maximum and memorizes every tuned programme position.

- If you turn the VCR off during Auto Tuning, Auto Tuning will stop halfway.
- If the VCR starts playback during Auto Tuning, Auto Tuning will stop halfway.

To Cancel Auto Tuning Mid-Operation:

 
Press **MENU** during Auto Tuning. Auto Tuning is cancelled.



To restart Plug in Auto Tuning:

If Auto Tuning is cancelled by pressing **MENU**:

- 1 Press **▲ EJECT** and remove the video cassette.
- 2 Keep the **▼** and **▲** buttons on the VCR pressed simultaneously for 3 seconds or more during the VCR on.



- The channel displayed on the VCR display disappears for a moment then changes to 1.

Display Symbol



Disappears → 1

- 3 Disconnect the mains lead and then reconnect it.
- 4 Turn off the VCR and then turn it on.
 - Auto Tuning commences.

If Auto Tuning stops halfway by turning the VCR off, playback or a power failure:

- 1 Disconnect the mains lead and then reconnect it.
- 2 Turn off the VCR and then turn it on.
 - Auto Tuning commences.

Auto Tuning Using the On Screen Display


Introduction

The VCR is tuned automatically by Plug in Auto Tuning. However, Auto Tuning using the On Screen Display should be performed according to the following method if necessary.

Preparations

- Confirm that the TV is on and the VCR viewing channel is selected.
- Turn on the VCR and select any programme position except A1 or A2.

Set the VCR—TV switch to VCR for using the numeric buttons.

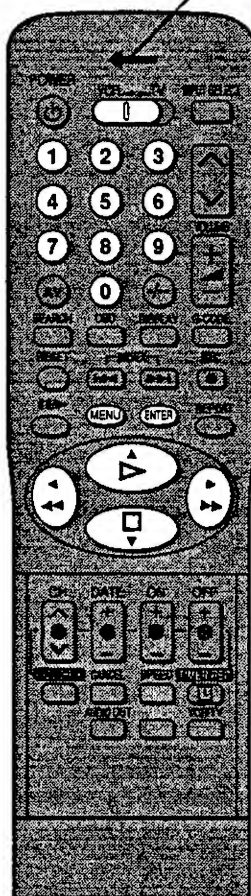

Operations On Screen Display

1

(MENU)

2

(ENTER)

3

(ENTER)

↓

(ENTER)

Press **MENU**.

Select **TUNER PRESET**.

Select **AUTO TUNE** and press ◀ or ▶.

• When Auto Tuning is completed, the On Screen Display disappears and programme position 1 is selected.

The number displayed here is the number of channels still to be auto tuned.

Notes:

- Auto Tuning searches for TV stations from VHF minimum to UHF maximum and memorizes every tuned programme position. Other programme positions are skipped.
- Auto Tuning takes five or more minutes to complete its search.
- If the VCR is not correctly tuned by Auto Tuning, follow the procedure on the next page.
- To rearrange the channels at the desired channel positions, proceed with Manual Tuning.

Channels that can be Received


	VHF	CATV	UHF
NV-SD630A	0-12	45-470MHz	28-69
NV-SD630EA	1-11	44-470MHz	21-69

Setting Up

Manual Tuning Procedure

- 1 Press **MENU**.
- 2 Select **TUNER PRESET** by pressing **▲** or **▼** and **ENTER**.
- 3 Select **CH** by pressing **▲** or **▼** then select the channel number you want tuned by pressing **◀** or **▶**.
- 4 Confirm that **CLEAR** is set to **OFF**.
- 5 Select **SEARCH** by pressing **▲** or **▼** then press **◀** or **▶**.

On Screen Display

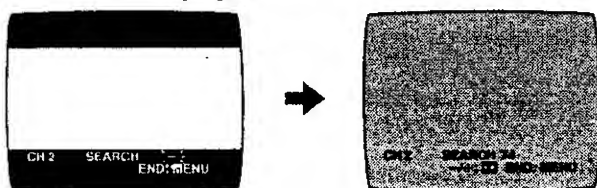


- 6 If the desired TV station has not been tuned, press **◀** or **▶** again.
 - Press **MENU** and repeat steps 3–5 for each programme position you want to tune to a station.
 - To exit, press **MENU** three times.

Direct Tuning

- 1 Repeat steps 1–4 in **Manual Tuning**.
- 2 Select **SEARCH** by pressing **▲** or **▼**.
- 3 Using the **numeric buttons** on the remote controller (Ensure that **VCR/TV** switch is set to **VCR**.), enter the same number as the number of the channel to be tuned. For the 5A and 9A channels, input the following numbers: 90 for CH-5A, 91 for CH-9A.
 - For other channels that require tuning, repeat steps 3–4 in **Manual Tuning** and steps 2–3 above.
 - To exit, press **MENU** twice.

Fine Tuning Procedure

- 1 Press **MENU**.
- 2 Select **TUNER PRESET** by pressing **▲** or **▼** and **ENTER**.
- 3 Select **CH** by pressing **▲** or **▼** then select the programme position by pressing **◀** or **▶**.
- 4 Select **FINE** by pressing **▲** or **▼**.
- 5 Press **◀** or **▶** to obtain the best tuning condition.

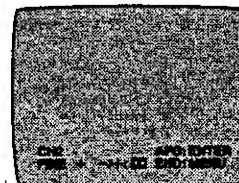

- To return the tuning to its former state, press **ENTER**.
- 6 Press **MENU**.

Blanking of Unused Programme Positions

- 1 Press **MENU**.
- 2 Select **TUNER PRESET** by pressing **▲** or **▼** and **ENTER**.
- 3 Select **CH** by pressing **▲** or **▼** then select the programme position by pressing **◀** or **▶**.
- 4 Select **CLEAR** by pressing **▲** or **▼**.
- 5 Select **ON** by pressing **◀** or **▶**.
 - Repeat steps 3–5 for other unused programme positions to skip during the selection of programme positions.
 - To cancel the blanking of a programme position, select that programme position then select **CLEAR OFF**.
- 6 Press **MENU** twice.


CH ADD&DELETE

Example:


If you want to add a new channel between CH4 and CH6,

1 Press **MENU**.


On Screen Display

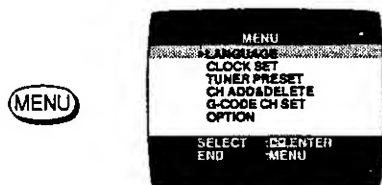

2 Select **CH ADD&DELETE** by pressing **▲** or **▼** and **ENTER**.

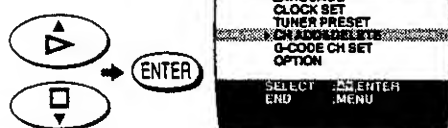

3 Select the desired channel (example CH6) by pressing **▲** or **▼** then select **ADD** by pressing **▶**.

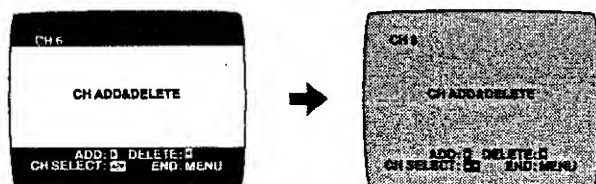

Before Adding

Programme Position	Channel
1	2
2	4
3	6
4	8
5	10
6	12
7	—
8	—

After Adding

Programme Position	Channel
1	2
2	4
3	—
4	6
5	8
6	10
7	12
8	—

- Adding a channel shifts the programme positions of CH6 to CH12 up, as shown in the list above.
- The list of the programme positions do not appear on the On Screen Display.

4 After adding, Tune the added channel. (See steps 3–5 in **Manual Tuning**.)


- Press **MENU** and repeat steps 3–4 for each of the other programme positions.

5 Press **MENU** three times.


Example:

If you want to delete CH6,


1 Press **MENU**.

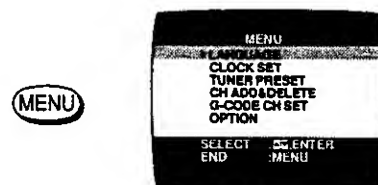

2 Select **CH ADD&DELETE** by pressing **▲** or **▼** and **ENTER**.

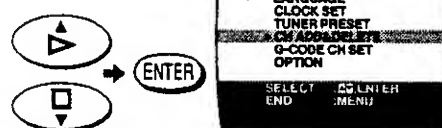

3 Select the desired channel (example CH6) by pressing **▲** or **▼** then select **DELETE** by pressing **▶**.

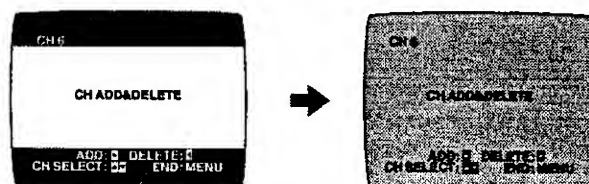

Before Deleting

Programme Position	Channel
1	2
2	4
3	6
4	8
5	10
6	12
7	—
8	—

After Deleting

Programme Position	Channel
1	2
2	4
3	8
4	10
5	12
6	—
7	—
8	—

- Deleting a channel shifts the programme positions of CH8 to CH12 down, as shown in the list above.
- The list of the programme positions do not appear on the On Screen Display.
- Press **MENU** and repeat step 3 for each of the other programme positions.


4 Press **MENU** twice.

Setting Up

Setting the Remote Controller for Operation of your TV

You can operate the TVs of the manufacturers listed below with the remote controller after setting it.

Set VCR—TV switch to TV for using POWER , the  and  buttons and the numeric buttons.

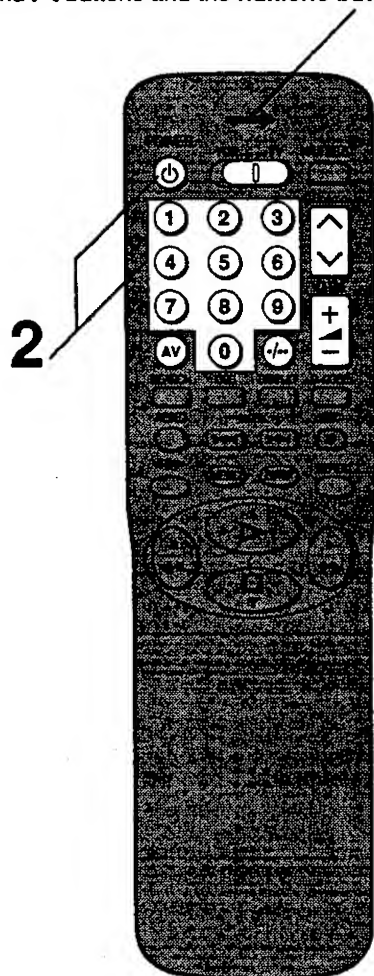


This setting procedure allows you to operate the TVs of some manufacturers using the supplied remote controller.

Preparation

Set the VCR—TV switch to TV.

Operations

.....
1 Find the manufacturer number of your TV while referring to the following table.

2 While holding down POWER , use the **numeric buttons** to enter the manufacturer number. This completes the settings for the TV manufacturer.
 • Be sure to enter the number in two digits.
 Example: 1→01

3 To confirm that the correct settings were made, check whether the TV can be operated properly.
 • When a manufacturer has multiple numbers in the following table, try entering other numbers if the TV operations cannot be performed properly, and then select the optimal number.

Notes:


- If you are using a Panasonic TV, this setting has already been made, and so you do not need to perform the above setting procedure. However, this remote controller may not work with some Panasonic TVs.
- Some TV models cannot be operated using this remote controller (including all TVs non-remote compatible).

- 01 Panasonic/National
- 02 Panasonic/National
- 03 Panasonic/National
- 04 Panasonic/National
- 05 SONY
- 06 TOSHIBA
- 07 JVC
- 08 HITACHI
- 09 MITSUBISHI
- 10 MITSUBISHI
- 11 SHARP
- 12 PHILIPS, SAMSUNG
- 13 NEC
- 14 SANYO
- 15 GOLDSTAR
- 16 GOLDSTAR
- 17 SAMSUNG
- 18 SAMSUNG
- 19 SANYO

Language Setting of the On Screen Display

Preparations

- Confirm that the TV is on and the VCR viewing channel is selected.
- Turn on the VCR.

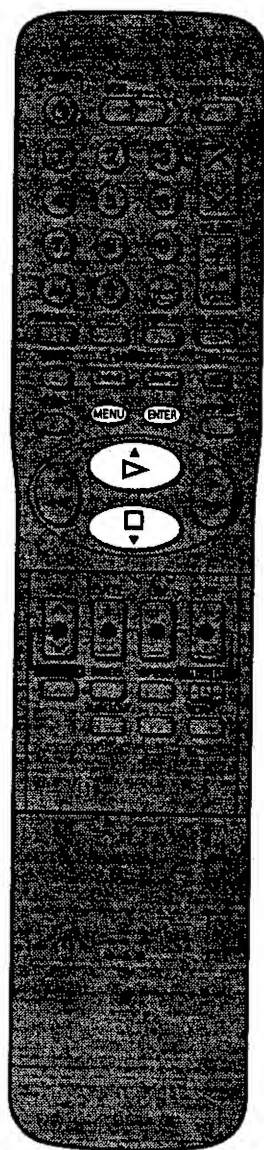


To Select the Desired Language

Select one of the two languages displayed: English and Russian.

- 1 Press **MENU**.



- 2 Select **LANGUAGE**.

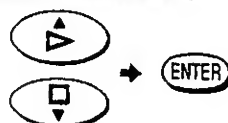


- 3 Select the desired language.



- 4 Press **MENU** twice.



On Screen Display

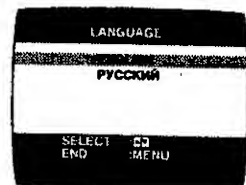

Setting Up

Note:


The menu screen has a blue background. However, if there is no signal input while A1 or A2 is selected, the menu screen may change to black and white when **MENU** is pressed. This does not indicate a malfunction. If it happens, either input a signal or select another programme position.

Setting the Clock of your VCR

The clock will operate for at least 3 years in total after it has been set, – in the event of a power failure, it will operate on its backup system. After 3 years, it will only operate for 1 hour on its backup system.

Preparations

- Confirm that the TV is on and the VCR viewing channel is selected.
- Turn on the VCR.

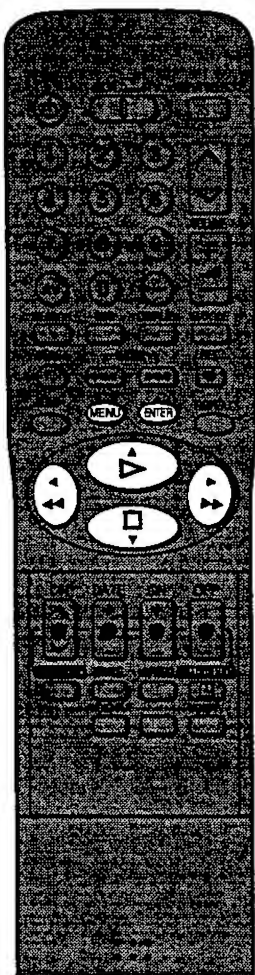

Example:

Date: 16 October, 2005

Time: 20:15

Operations On Screen Display

 
1

(MENU)



Press **MENU**.

2



Select **CLOCK SET**.

3

Set each item by pressing ▲ or ▼ and ►.
Press ◀ to return to the previous item.




Set Year to "2005".



Set Month to "10".



Set Date to "16".

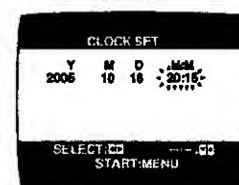

Set Time to "20:15".

- When it is kept pressed, the indication changes in 30-minute steps.
- There is no need to press ►.

Time Reset Function

If the clock is less than two minutes slow or fast, it can easily be reset to the proper time.

Example:

Resetting the clock to 12:00.00

- 1 Select **CLOCK SET** from the OSD menu and press **ENTER**.
- 2 When the current clock display on the VCR is between 11:58.00 and 12:01.59, press **MENU** as soon as you hear the 12:00.00 signal. This resets the time to 12:00.00.

4

(MENU)

Display Symbol



Press **MENU**.

- The clock starts.

Preparations for G-Code Programming

Identification numbers must be set for G-Code programming. Proceed with the G-Code programming operation described on page 32, and the identification numbers of the TV stations concerned will be set automatically. This will allow G-Code programming to be undertaken without performing the operation described on this page. However, you can follow the setting procedure described below if you wish to set the identification numbers of all the TV stations prior to actual programming.


"Identification numbers" refer to the numbers used for identifying TV stations.

The programme positions on the VCR receiving the TV stations are set in these identification numbers.

Have a newspaper or magazine which lists today's local TV station programmes and G-Code numbers on hand.

Preparations

- Set the clock of the VCR. See page 18.
- Store TV broadcasts in your VCR. See pages 12-15.
- Confirm that the TV is on and the VCR viewing channel is selected.
- Turn on the VCR.

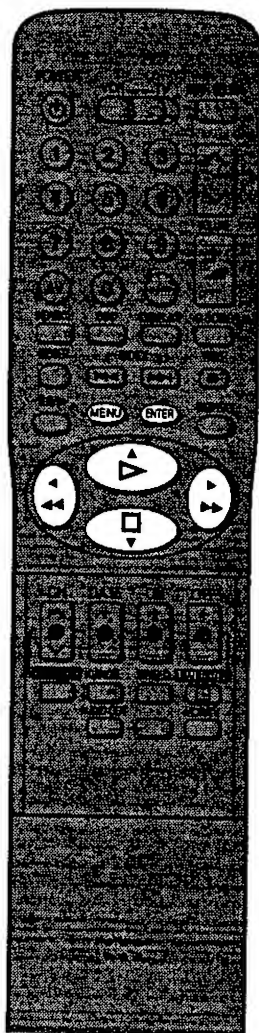



Operations

On Screen Display



1 Press MENU.





2 Select G-CODE CH SET.

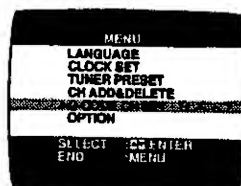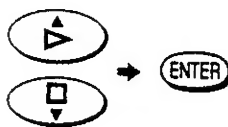

 3 Select the identification number (GUIDE CH) (001-255).

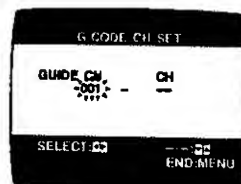

4 Press ◀ or ▶ then select the programme position (1-99, A1 or A2).

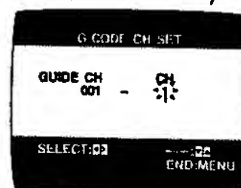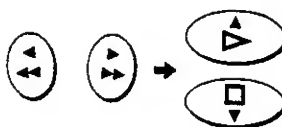

- To set the other TV stations, press ◀ or ▶ then repeat steps 3 and 4.

5 Press MENU twice.



Note:

To receive satellite stations, the satellite receiver must be connected to the VCR and programme position must be set depending on the type of connection.

A1/A2: When the satellite receiver is connected to the audio/video input sockets (AV1/AV2).

- When the satellite receiver is connected by means of the RF coaxial cable, set to a free programme position between 1 and 99.

Setting Up

Example:
(NV-HD630A)

TV Station	Position Number	Identification Number (GUIDE CH)
ABC	2	002
ATN	7	007
TCN	9	009
TEN	10	010
SBS	28	028/001

Example:
(NV-HD630EA)

TV Station	Position Number	Identification Number (GUIDE CH)
TV ONE	1	001
CHANNEL 2	2	002
TV3	3	003
SKY TV MOVIES	*	004
SKY TV SPORTS	*	005
SKY TV NEWS	*	006
SKY ORANGE	*	007
SKY DISCOVERY & TRACKSIDE	*	008
CTV	11	011

***Connection to the Sky decoder**

When the Sky decoder is connected to the audio video input sockets:

Set to "A1" or "A2".

When the Sky decoder is connected by means of the RF coaxial cable:


Set to the programme position that the Sky decoder is tuned to.

- When G-Code programming, turn on the Sky decoder and select the desired Sky channel.

Settings Using the On Screen Display


Preparations

- Confirm that the TV is on and the VCR viewing channel is selected.
- Turn on the VCR.

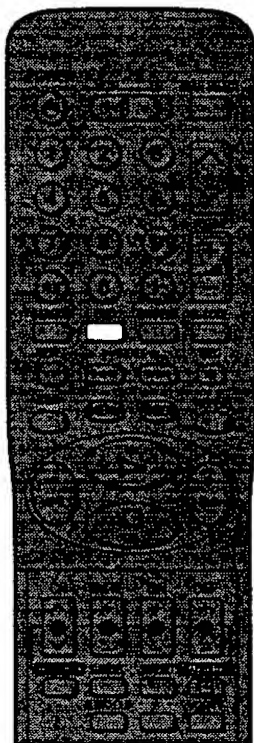

On Screen Display

- 1 Press OSD.

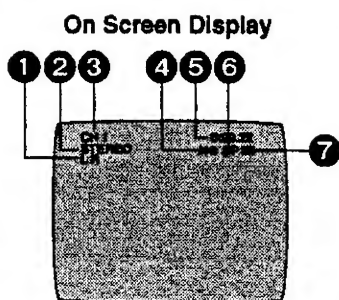

- 2 Press OSD again to make the on screen display disappear.



1 Audio Output Mode Indicators

The Left (L) and Right (R) Indicators show which sound mode is selected with **AUDIO OUT**.

Stereo: Both the Left (L) and Right (R) Indicators appear.

Left: The Left (L) Indicator appears.

Right: The Right (R) Indicator appears.

Normal: Neither the Left (L) nor Right (R) Indicator appears.

2 STEREO or BILINGUAL Indicator (NV-HD630A)

When receiving a TV programme, the type of sound system in which it is broadcast is automatically indicated.

STEREO, M1 and M2 Indicator (NV-HD630EA)

When receiving a TV programme with the NICAM sound system, the type of sound system in which it is broadcast is automatically indicated.

STEREO: When receiving a NICAM stereo broadcast.

M1 M2: When receiving a NICAM dual-sound broadcast.

M1: When receiving a NICAM monaural broadcast.

Note:

The hear stereo performance connect as shown on page 9 to a TV or Stereo Amplifier with left and right audio inputs.

3 Programme position

4 Tape running display

Stop, Eject	
Rewind, Review	◀◀
Fast forward, Cue	▶▶
Playback	▶
Still playback	
Recording	●
Recording pause	●
Slow playback	▶
Repeat playback	R ▶

5 Present time/Tape counter/Remaining tape time/OTR indication/Dew/Index search/Play-Off Timer

Information	Display
Present time	17:24
Tape counter	-2:35.47
Remaining tape time	REMAIN 2:34
OTR indication	OTR 60
Dew	DEW
Index search	S 01
Play-Off Timer	OFF 60

6 Tape speed indicator (SP/LP/EP)

7 Cassette-in Indicator

Note:

The on screen display may be disturbed or disappear during special playback.

 
Option Setting

To Select the Corresponding Video Cassette Tape Length to Display the Approximate Remaining Tape Time (TAPE SELECT)

1 Press **MENU**.

MENU



2 Select **OPTION**.




On Screen Display



 3 Select **TAPE SELECT**.

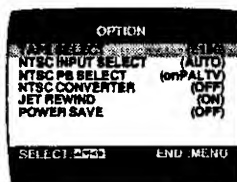

4 Select the corresponding video cassette tape length.

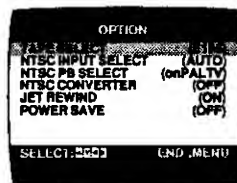

E180: For E30, -60, -90, -120, -150 and -180 tapes.

E195: For E195 tape.

E240: For E240 tape.

E260: For E260 and -300 tapes.

- The remaining tape time may not be displayed correctly depending on the tape used.


 
5 Press **MENU** twice to make the on screen display disappear.

MENU

To Select the Colour TV system of the TV used to Record by NTSC Signals from an External Signal Source


Follow steps 1 to 2 of TAPE SELECT.

3 Select **NTSC INPUT SELECT**.

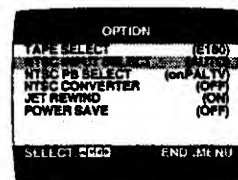

4 Select **AUTO**.

Allows NTSC 4.43 or 3.58 signals to be distinguished automatically.

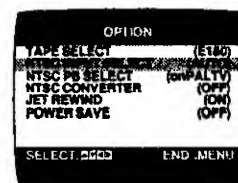

- Normally set at this position. If the tape has not recorded correctly, select 4.43 or 3.58.

4.43: When recording NTSC 4.43 signals from an external signal source.

3.58: When recording NTSC 3.58 signals from an external signal source.
Some programmes on NTSC 3.58 system cannot be recorded correctly at this position.


5 Press **MENU** twice to make the on screen display disappear.

MENU


To Select the Colour TV system of the TV used to play back a tape recorded by NTSC signals

Follow steps 1 to 2 of TAPE SELECT.

3 Select **NTSC PB SELECT**.

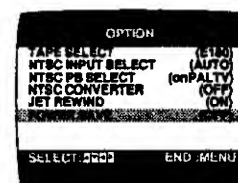

4 Select the desired position according to the colour TV system of the TV.

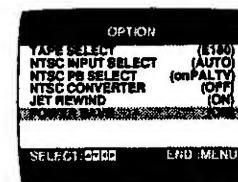

on PAL TV: For TVs that can receive PAL signals.

4.43: For TVs that can receive NTSC 4.43 signals.

3.58: For TVs that can receive NTSC 3.58 signals.


 
5 Press **MENU** twice to make the on screen display disappear.

MENU


To Play a NTSC Game on PAL System TV

Follow steps 1 to 2 of TAPE SELECT.

3 Select NTSC CONVERTER.

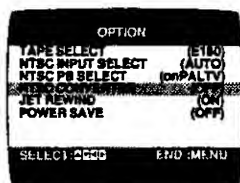

4 Select ON or OFF.

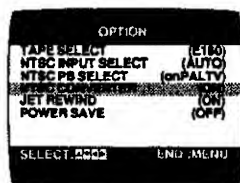

OFF: Normally set at this position.

ON: PAL TV can receive signals from NTSC 3.58 signal source (e.g., NTSC game machines.) connected to the VCR main unit. However, when recording, this function does not work.

- When receiving NTSC 4.43 signals, this function does not work correctly.

5 Press MENU twice to make the on screen display disappear.




To Change the Rewinding Speed


This function enables the tape to rewind at the 360 times speed.

Follow steps 1 to 2 of TAPE SELECT.

3 Select JET REWIND.

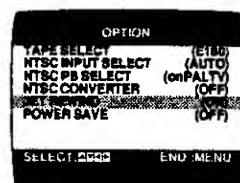

4 Select ON or OFF.

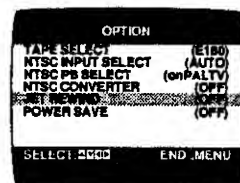

- Select OFF if you wish to rewind the VCR slowly.

5 Press MENU twice to make the on screen display disappear.




For Minimised the VCR's Power Consumption When the VCR is Switched Off

Follow steps 1 to 2 of TAPE SELECT.

3 Select POWER SAVE.



4 Select ON or OFF.

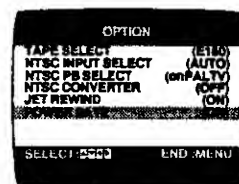

ON: This setting makes the display disappear when the VCR is off.

It will not operate in the Timer standby mode.

After recording all programmed data, the VCR will go into Power save mode.

OFF: This setting does not conserve power when the VCR is off.


5 Press MENU twice to make the on screen display disappear.




To Select the Sound Mode (NV-HD630EA only)

Follow steps 1 to 2 of TAPE SELECT.

3 Select MONAURAL.

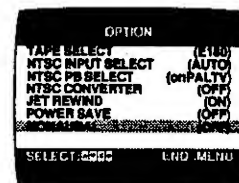

4 Select ON or OFF.

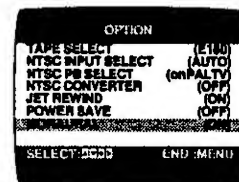



- Select ON to record the normal sound during a NICAM broadcast or if the stereo sound is distorted due to inferior reception conditions.

5 Press MENU twice to make the on screen display disappear.



Setting Up

Playback

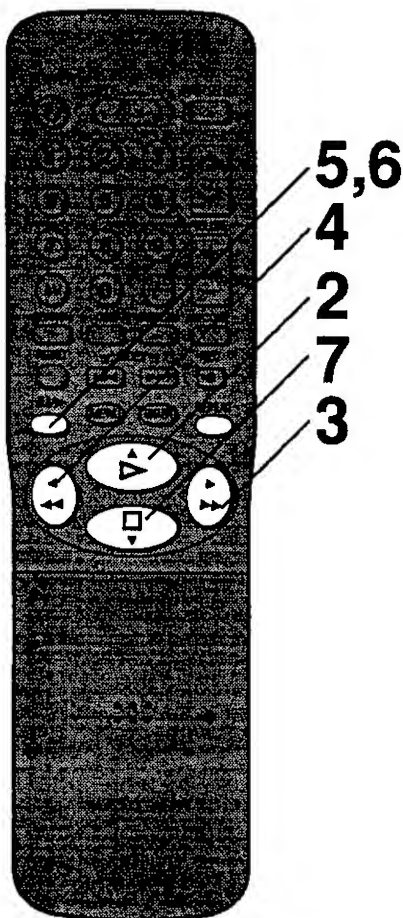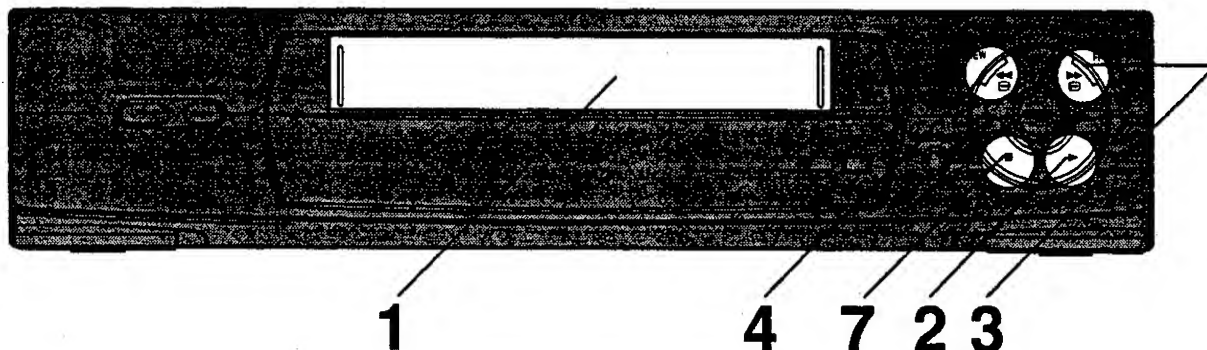



Operations	Display Symbols
1	Insert a recorded video cassette tape.
2	Start viewing the picture.
3	Search forward by tapping FF . • To change back to normal playback, press PLAY .
4	Search backward by tapping REW . • To change back to normal playback, press PLAY .
5	View a still picture. • Press PAUSE/SLOW . • To continue normal playback, press PLAY or PAUSE/SLOW .
6	View a slow motion picture. • Keep PAUSE/SLOW pressed for 2 seconds or more. • To continue normal playback, press PLAY .
7	Stop viewing the picture.


Note:


- If you keep **FF** or **REW** pressed in step 3 or 4, search playback is activated while the button is pressed, and operation returns to normal playback when the button is released.


PLAY-OFF TIMER



Whenever you are playing back and wish to stop the tape automatically, simply set the playback duration by pressing **PLAY/OFF**  repeatedly.

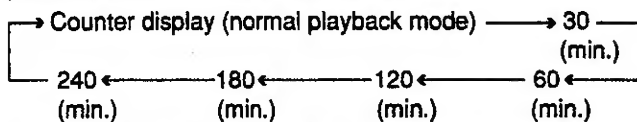The duration indicated on the VCR display changes by pressing **PLAY/OFF**  as follows.



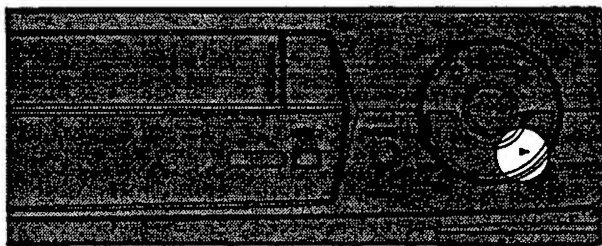


Press **PLAY/OFF**  on the VCR main unit during playback.




- The VCR will automatically switch off when Play-Off Timer is completed. To turn the VCR on again, press **POWER**  (**POWER** ).


Notes:

- The Play-Off Timer function works during normal playback.
- When the tape reaches its end during Play-Off Timer, the tape will be rewound to the start and the VCR will turn itself off.
- To stop Play-Off Timer at any time, press  (**STOP**) or **POWER**  (**POWER** ).
- Repeat Playback function does not work during Play-Off Timer.


Other Playback Functions To Obtain a High Speed Picture During Fast Forward or Rewind

Keep  (FF) pressed during fast forward.

Keep  (REW) pressed during rewind.

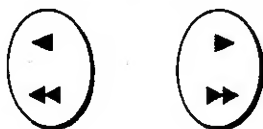

To Eject the Video Cassette Using the Remote Controller


Keep pressing  (**STOP**) for at least 3 seconds.




To Play back the Recorded Part Repeatedly

Press **REPEAT** or keep  (**PLAY**) pressed for 5 seconds or more.

The "R  " display appears on the TV screen.

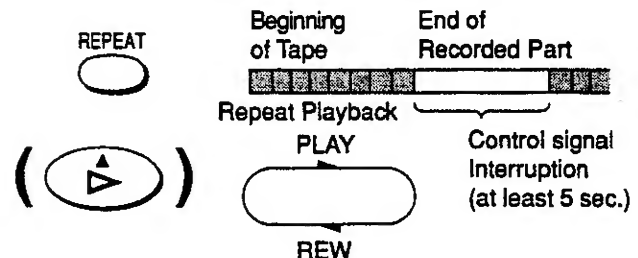

- Repeat Playback function does not work during Play-Off Timer.
- Press  (**STOP**) to release the VCR from the Repeat Playback mode.

Notes:

- Set **NTSC PB SELECT** according to the TV system of your TV.

When playback the NTSC tapes:

on PAL TV: For PAL TV.

4.43: For NTSC (4.43) TV.

3.58: For NTSC (3.58) TV.


When playback the PAL tapes:




You do not need to set **NTSC PB SELECT**.


NTSC 3.58 recording requires **NTSC INPUT SELECT** to be in the AUTO or 3.58 position, however if **NTSC INPUT SELECT** is in this position when recording a NTSC 3.58 signal, no colour is available for the PAL TV. Once the recording is completed, you then need to select on **PAL TV** to view the recording in colour on PAL TV.

- Audio reproduction of linear (conventionally recorded) tapes will be monaural when played back on the FM Hi-Fi video recorders.
- Cue, review or slow playback will be automatically released after 10 minutes, and still playback, after 5 minutes.
- In Cue and Review playback, noise bars and distortions may occur on the screen. However, this is not a malfunction.
- In the LP (EP) mode only:
 1. During any playback mode other than normal playback, the picture may have some noise bars, the colour may be unstable, or a black and white picture may appear.
 2. When playing back a tape which was recorded on another VCR, it may be necessary to adjust tracking control. In some cases the picture quality may still be inferior. This is due to format constraints.
 3. Depending on the TV set used, the playback picture may roll up or down during special playback (Pause, Cue, Review, or Slow playback mode). However, this is not an indication of a malfunction.

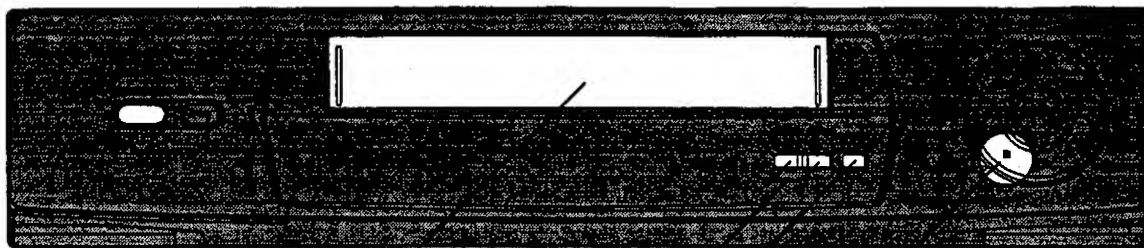Manual Recording



Set VCR--TV switch to VCR for using POWER , the  and  buttons and the numeric buttons.


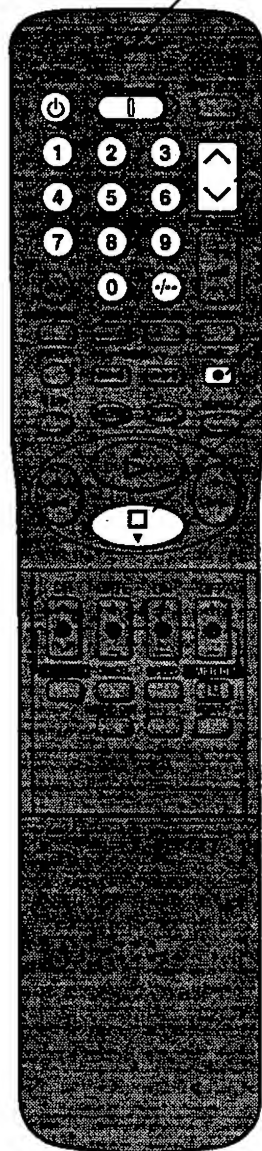


Operations Display Symbols

1



  Insert a video cassette tape with an intact erasure prevention tab.

- If it has already been inserted, press **POWER**  (POWER ) to turn the VCR on.

2



Select the TV station.

- It is also possible to select by pressing **numeric buttons**.
- Ensure that VCR--TV switch is set to VCR.

3



Start recording.

4



Stop recording.

To Select the Desired Tape Speed

Press **SPEED** before recording.



To Interrupt Recording

Press **II/|>** (PAUSE/SLOW) during recording.
Press again to continue recording.




To Record One TV Programme while Viewing Another One

- 1 Refer to steps 1–3 of the manual recording operation.
- 2 Select the TV programme on your TV that you wish to view now.
• Ensure that **VCR—TV** switch is set to **TV**.

To Display the Approximate Remaining Tape Time

- 1 Select **TAPE SELECT** from the on screen display and select the corresponding video cassette tape length.
See page 22.

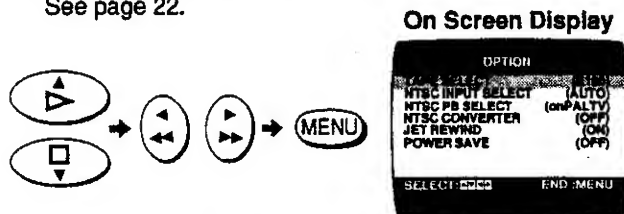

- E180: For E30, -60, -90, -120, -150 and -180 tapes.
- E195: For E195 tape.
- E240: For E240 tape.
- E260: For E260 and -300 tapes.

- 2 Press **DISPLAY**.




The display changes as follows each time **DISPLAY** is pressed.

→ Clock → Counter → Remaining Tape Time →

- The remaining tape time may not be displayed correctly depending on the tape used.

Notes:

- When a video cassette with a broken off erasure prevention tab is inserted, the "E" indication will flash to indicate that recording is not possible even if **REC ● (● REC/OTR)** is pressed.
- The recording pause mode will be automatically released after 5 minutes, and the VCR will return to the stop mode.

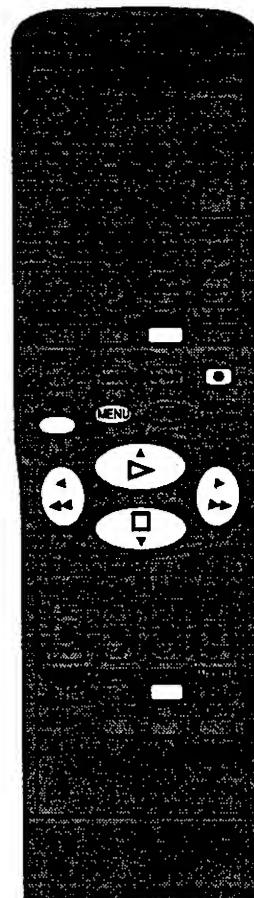

The NICAM Broadcast System (NV-HD630EA only)

NV-HD630EA is equipped with the NICAM sound system. NICAM is a 2 channel sound broadcast system to provide either a high quality stereo sound track or 2 independent MONO sound tracks, M1 and M2.

NICAM programmes are always accompanied by standard sound broadcasts and you can select the desired sound with **AUDIO OUT** during playback.

- The NICAM digital stereo sound can only be recorded on the Hi-Fi audio track.
- When NICAM programme is being received, the indicators are lit to inform you of the type of broadcast. (See page 21.)
- To record the regular sound (ordinary normal sound) on the FM audio tracks when a NICAM programme is received, set **MONAURAL** to **ON**. (See page 23.)
- To hear stereo performance connect as shown on page 9 to a TV or Stereo Amplifier with left and right audio inputs.

Important Note for the NICAM System

When NV-HD630EA is switched on, the tuner will automatically switch to a NICAM broadcast, if NICAM is being transmitted.

 
At this time the NICAM signal is transmitted on stereo channels only, since the M1 and M2 formats are not yet available. Even if the sound track is in MONO, the stereo indicator will appear.



One-Touch Recording (OTR)

Whenever you are in a hurry to start a timer recording with automatic stop in your absence, simply set the recording duration by pressing **● REC/OTR** repeatedly.

The duration indicated on the VCR display changes by pressing **● REC/OTR** as follows:



Preparation


Insert a video cassette with an intact erasure prevention tab.

Operations



1 Ready the video source which is to be recorded, and start recording.

2 Press **● REC/OTR** on the VCR main unit repeatedly to select the desired recording duration.



- The VCR will automatically switch off when OTR is completed. To turn the VCR on again, press **POWER** .

Notes:

- The OTR function works during normal recording.
- When the tape reaches its end during OTR, the VCR will turn itself off.
- To stop OTR at any time, press **STOP**  or **POWER** .

Timer Recording

4-Key Programming


Up to 8 timer programmes, including weekly and daily programmes, can be recorded up to one month in advance by setting the timer.

Preparations

- Insert a video cassette tape with an intact erasure prevention tab.
- Confirm that the TV is on and the VCR viewing channel is selected.
- Turn on the VCR.
- Check that the clock is set to the correct time. If it has not been set, refer to page 18.

Example:


Programme position (channel); 2
Date; 27 October
Starting time; 20:02
Ending time; 21:30
Tape speed; LP
(Present date; 16 October)

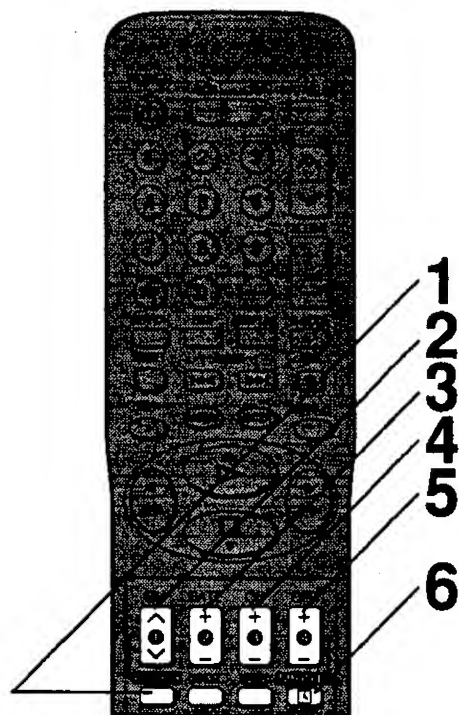


Operations

On Screen Display

- 1 Press **PROG./CHECK**.

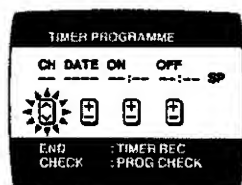


- 2 Set Programme position (channel) to "2".

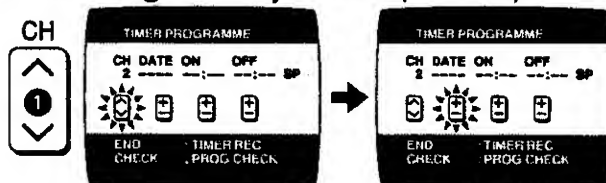


- The next item will flash after about 2 seconds.

- 3 Set Date to "27WE".

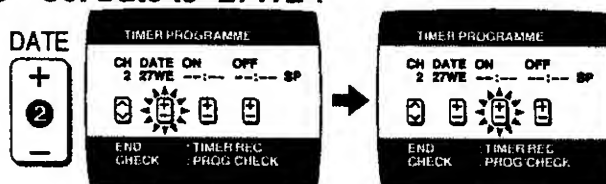

- 4 Set Starting time to "20:02".

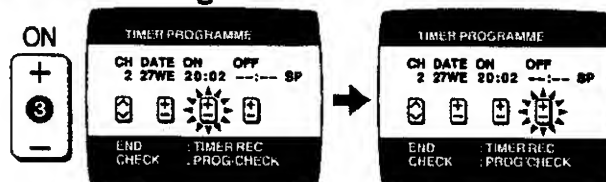


- When kept pressed, the indication changes in 30-minute steps.

- 5 Set Ending time to "21:30".



- 6 Set Tape speed to "LP".

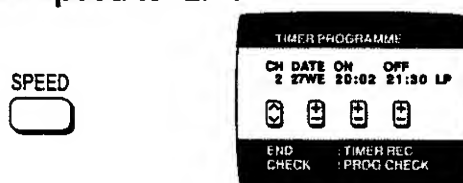

- 7 To activate timer recording, press **TIMER REC**.




- The "PROGRAMME IS COMPLETE." message appears.
- The VCR will be set to the timer recording standby mode after about 1 minute if **TIMER REC** is not pressed.

Weekly Timer Recording

In step 3, select the desired day by pressing **DATE** —.
For example, SU (Sunday)



On Screen Display

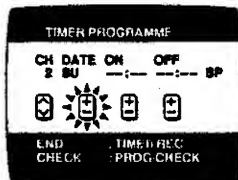


(SU=Sunday, MO=Monday, TU=Tuesday, WE=Wednesday, TH=Thursday, FR=Friday, SA=Saturday)

Daily Timer Recording


For this timer function, several groups of days can be selected.

- Ⓐ Daily recording from Monday to Friday (MO–FR)
 - Ⓑ Daily recording from Monday to Saturday (MO–SA)
 - Ⓒ Daily recording from Sunday to Saturday (SU–SA)
- In step 3, select the desired days by pressing **DATE** —.
For example, Ⓒ

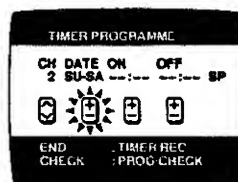

Timer Recording from an External Signal Source

If timer recording is performed by a unit connected to the audio/video input sockets, select the A1 or A2 indicator in step 2 for the programme position.

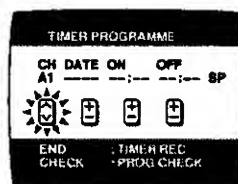


Setting other Programmes in Succession

Repeat steps 1–6.

Programming a Timer Recording of a TV Programme Until Its End (Auto SP/LP Change Function)

If, during a timer recording performed in the SP mode, the VCR determines that the remaining tape time is insufficient to record the programme to its end, the Auto SP/LP Change function automatically changes the tape speed to LP to ensure that the whole programme will be recorded. Depending on the remaining tape length, recording may be performed in the LP mode from the start. However, if the remaining tape time is still not sufficient in this case, the programme cannot be recorded to the end.

Example (Remaining Tape Time 60 min.):

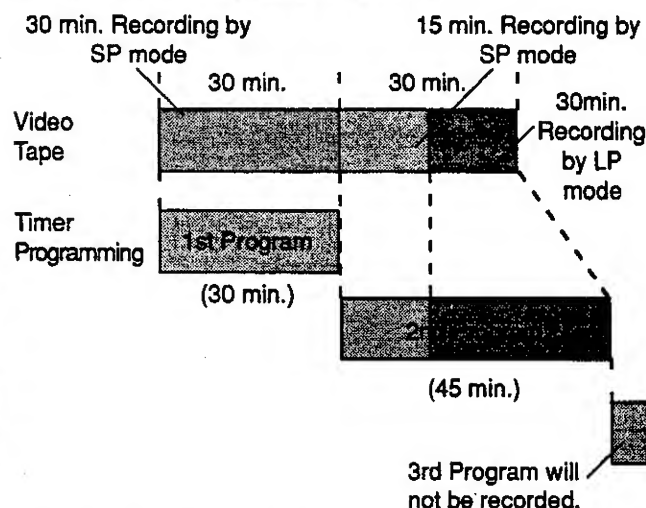


- The tape length must be set correctly. (See page 22.)
- Tapes except T30, -60, -90, -120, -140, -160, -180 tapes may not work correctly.

To Activate the Auto SP/LP Change Function:
Press **SPEED** to select "A".



 - Every time you press **SPEED**, the indication changes in the following order:



Checking a Timer Programme

- The VCR must be turned on, or the timer recording indicator "□" lit.
- Confirm that the TV is on and the VCR viewing channel is selected.

Press **PROG./CHECK** twice.

PROG. CHECK



CH	DATE	ON	OFF
1	SU-SA	10:30	11:00 LP
14	SU	15:00	16:00 SP
5	19TU	22:15	23:30 LP
A1	28TH	20:02	21:30 SP
4	30SA	19:10	19:55 SP
END MENU			

Cancelling a Timer Programme

- The VCR must be turned on, or in timer recording standby mode.
- Confirm that the TV is on and the VCR viewing channel is selected.

1 Press **PROG./CHECK** twice.

PROG. CHECK



CH	DATE	ON	OFF
1	SU-SA	10:30	11:00 LP
14	SU	15:00	16:00 SP
5	19TU	22:15	23:30 LP
A1	28TH	20:02	21:30 SP
4	30SA	19:10	19:55 SP
END MENU			

2 Press **PROG./CHECK** repeatedly until the desired timer programme number flashes on and off.

PROG. CHECK



CH	DATE	ON	OFF
2	27WE	20:02	21:30 SP
1	SU-SA	10:30	11:00 LP
14	SU	15:00	16:00 SP
A1	28TH	20:02	21:30 SP
4	30SA	19:10	19:55 SP
END MENU			

3 Press **CANCEL**.

CANCEL



CH	DATE	ON	OFF
2	27WE	20:02	21:30 SP
1	SU-SA	10:30	11:00 LP
14	SU	15:00	16:00 SP
A1	28TH	20:02	21:30 SP
4	30SA	19:10	19:55 SP
END MENU			

Note:

If timer recording is not completed (due to insufficient tape or cancellation by the user), the programmed timer recording data will be cancelled from the memory by 4 A.M. two days later.

However, if, at that time, the timer recording function is activated, the programmed timer recording data will be cancelled at 4 A.M. the next day.

G-Code Programming


Programming is now easier than ever; simply enter the G-Code number found in the programme scheduling pages of newspapers and magazines.

G-Code numbers are numbers assigned to programmes listed in the TV programme schedule found in newspapers and TV guides. When these numbers are entered, the numbers are converted to actual programming.

Preparations

- Insert a video cassette tape with an intact erasure prevention tab.
- Confirm that the TV is on and the VCR viewing channel is selected.
- Turn on the VCR.
- Check that the clock is set to the correct time. If it has not been set, refer to page 18.

Set VCR—TV switch to VCR for using the numeric buttons and the G-CODE button.

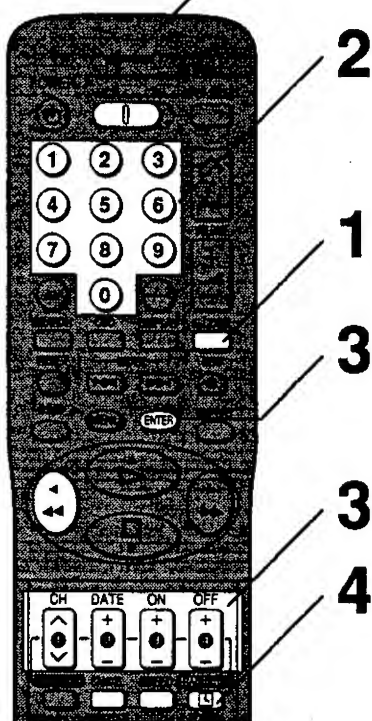

Operations

On Screen Display and Display Symbol

1 Press G-CODE.

- Ensure that VCR—TV switch is set to VCR.




2 Enter a G-Code number. Example: 123456




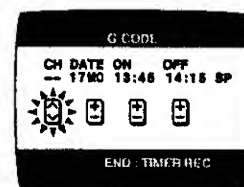
- It is also possible to check the number with VCR display without appearing the On Screen Display.
- If you have entered the wrong number, press **CANCEL** then enter the proper number. An alternative method is to press **◀** and then enter the proper number.

3 Press ENTER.

- The entered programme appears on the display.
- The starting time and the ending time appears alternately each 5 seconds on the VCR display.

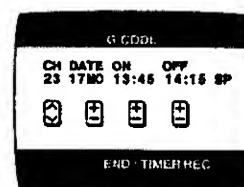

- Confirm that the number corresponds to the right programme. If the display looks like this and  on the VCR display flashes on and off: select the programme position of your VCR which receives the TV station you entered at step 2 using the **1 (CH)** then press **ENTER**.



- To make any corrections, use buttons **2 (DATE)**, **3 (ON)** and **4 (OFF)** the same way as described on page 29.

4 Press **TIMER REC** .



Notes:

- To select the desired tape speed, press **SPEED** after step 3.
- When the G-Code number is used for programming, the recording time may be slightly longer than the actual programme time.
- Repeat steps 2 and 3 if "PROGRAMME IS INCOMPLETE." appears.
- When programming two or more programmes, repeat steps 1-4.
- The procedures for checking and cancelling a timer programme are the same as on page 31.

Search Functions


Searching Timer-Recorded Programmes (Programme List Search)

Searching Using the Programme List Search Function

When timer programmes are recorded by this VCR, the VCR stores the programming details, and the programmes are selected and searched by the programme list search function.

Preparations

- Confirm that the TV is on and the VCR viewing channel is selected.
- Release the standby status for timer programme recording.

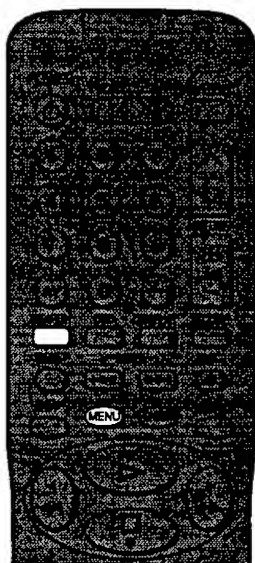


Displaying the PROGRAMME LIST SEARCH Screen

Press **SEARCH**.



On Screen Display

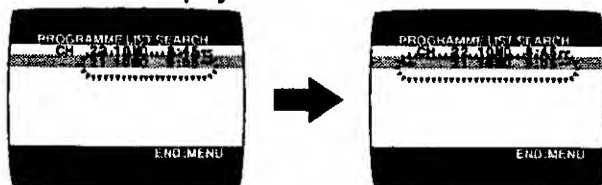

- The details of the timer-recorded programmes on this video cassette are displayed on the PROGRAMME LIST SEARCH screen in the sequence in which the programmes were recorded.
- When no further operations are undertaken for about 3 or more seconds, the search for the last timer-recorded programme is commenced.
- Upon completion of the search, playback starts from the searched point on the tape.

Searching other programmes

Press **SEARCH** several times to select the programme which is to be searched.

SEARCH



- When **SEARCH** is pressed once, the timer-recorded programme which was recorded last is selected. Each time **SEARCH** is subsequently pressed, the programme before (or above on the list shown on the screen) is selected.
- If **SEARCH** is pressed again when the top programme is selected, the bottom programme will be selected.
- Another programme can be selected by pressing **SEARCH** even after a search has been commenced.

To stop the search at any time

Press **MENU** and clear the PROGRAMME LIST SEARCH screen.

Notes:

- This function does not work during timer recording standby mode.
- This function works only for video cassettes containing timer-recorded programmes.
- Since this function works only for the currently loaded video cassette, **all the programming list details will be cleared when the video cassette is ejected or replaced with another one.** At times like this, use the VHS index search system or the intro-jet scan function. (See page 34.)
- The programme list search function may not work properly when recorded programmes run for 15 minutes or less.
- Ensure that **TAPE SELECT** for **OPTION** on the **MENU** is set correctly, as otherwise, this function will not operate correctly. (See page 22.)
- When **SEARCH** is pressed during playback, playback is stopped immediately, and the PROGRAMME LIST SEARCH screen appears.
- Up to 8 programmes can be displayed on the PROGRAMME LIST SEARCH screen. If the timer is used to record more than 9 programmes, the oldest programme will be deleted on the PROGRAMME LIST SEARCH screen, and a new timer-recorded programme will be entered and displayed.
- This function may not work properly depending on the tape position when you press **SEARCH**.
- This function may not work properly when for example, you try to record over a programme with another programme that is timer-recorded on the same portion of the tape.

To Find the Beginning of Each Recording (VHS Index Search System)

Example:

Searching for the 2nd recorded segment in the forward direction.



Press **INDEX**  twice.

(This operation is performed while the VCR is in the stop mode or normal playback mode.)





Display Symbol



- After finding the specific recorded segment, playback starts automatically.
- If you press **INDEX**  too many times, simply press **INDEX**  to correct it. In this way, you can reduce the displayed figure down to 1.
- Up to 20 index signals can be searched for in both directions.
- The figure on the display decreases by 1 each time an index signal is located.


Recording Index Signals

Index signals are recorded in the following cases.

- When a recording is started by pressing **REC**  (**REC/OTR**).
- When **REC**  on the remote controller is pressed during recording.
- When timer recording is activated.

Note:

The index search function can only work correctly if the index signals are spaced at least 5 minutes.

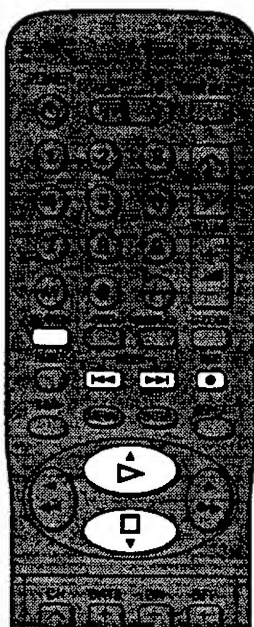

Searching while checking the video cassette contents (Intro-Jet Scan)

The approximate beginnings of each recorded programme are played in succession at the high speed so that the programme to be viewed can be located easily.

Preparations


- Confirm that the TV is on and the VCR viewing channel is selected.
- Load the pre-recorded video cassette.


1 Press **SEARCH**.

(This operation is performed while the VCR is OFF or while the VCR is in the stop mode or normal playback mode with the VCR ON.)

On Screen Display

SEARCH

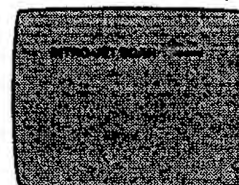


- The tape is rewound to the start, and played for about 10 seconds at the high speed. It is then fast forwarded, the VISS (VHS Index Search System) signals are searched in succession, and each time the signals are found, the tape is played for about 10 seconds at the high speed.
- 2 When the programme to be viewed is reached, press  (**PLAY**).



- Normal playback now commences.

To stop the operation at any time

Press  (**STOP**).



Notes:

- This function may not work properly when recorded programmes run for 15 minutes or less.
- When the timer recording is completed and the video cassette is neither ejected nor replaced with another one and then **SEARCH** is pressed, the intro-jet scan function will not work, and the programme list search function will work instead. (See page 33.)


Making a copy

Copying


This function can be used to make up an edited tape from other recordings or video sources.
A new scene can be added to the end of previous one.

Preparations

- Connect a movie camera or another VCR to this VCR as shown.
- Insert a recorded cassette tape with an intact erasure prevention tab.
- Select the audio source required by pressing **INPUT SELECT** to set A1 or A2.
A1: Through the AV1 (AUDIO IN/VIDEO IN) sockets.
A2: Through the AV2 (AUDIO IN/VIDEO IN) sockets on front panel.

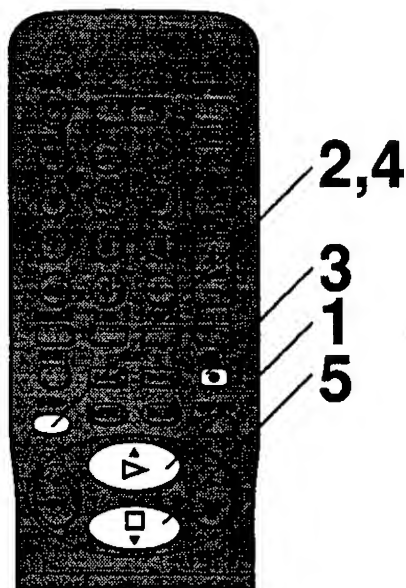

Recording VCR

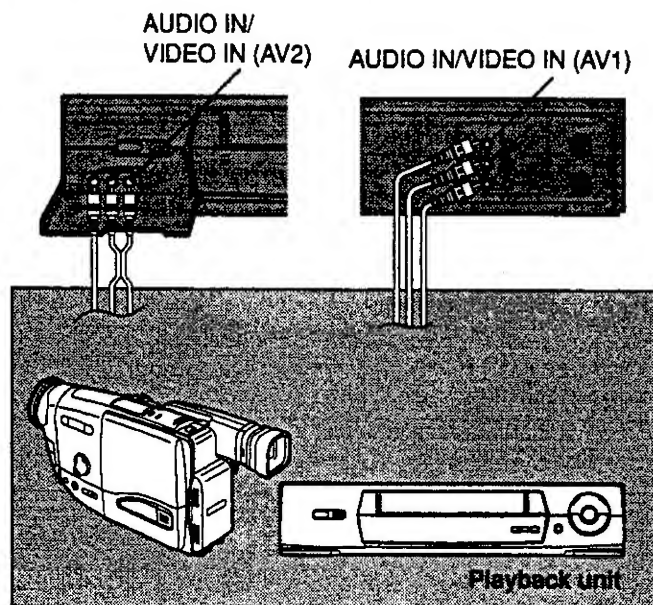

Operations

- 1 Search for the end of the previous recording.



- 2 Press **II/▶** (PAUSE/SLOW).



- 3 Press **REC** ● to switch the VCR from the pause mode to the recording standby mode.



- 4 Start the new recording by pressing **II/▶** (PAUSE/SLOW) again.




- 5 Press **□** (STOP) to stop recording.



Note:

The new sound will be recorded on both the normal and Hi-Fi sound tracks, only monaural sound recording is possible on the normal sound tracks.

Other Functions

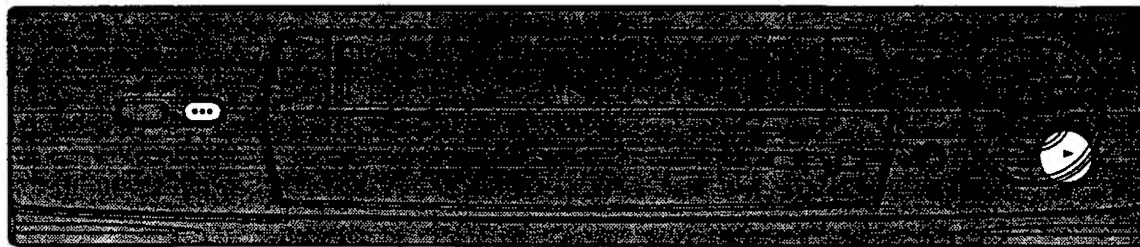

Child Lock Function

This function deactivates all buttons on the VCR and the remote control by holding down **ENTER** and **OFF (+)** simultaneously until the ">< hold" indication appears in the VCR display.

Display Symbol




- if you press a button while the Child Lock function is on, the ">< hold" indication appears in the VCR display to inform you that no operation is possible.

To cancel the Child Lock function

Hold down **ENTER** and **OFF (+)** simultaneously until the ">< hold" indication disappears in the VCR display.

- if you disconnect the power cable, the Child Lock function is automatically cancelled after the power backup time of approximately 60 minutes has elapsed.

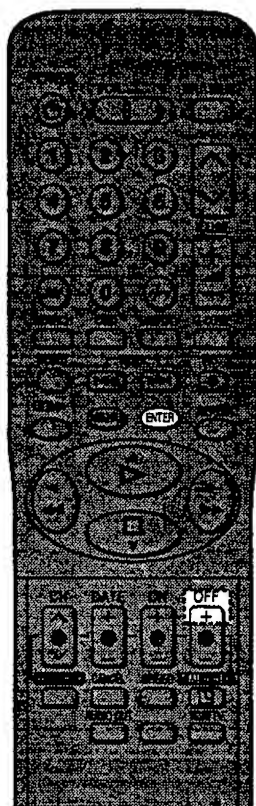

NTSC Playback

Tapes recorded in the NTSC system can be played back with this VCR via a PAL system TV.

- Select **NTSC PB SELECT** from the on screen display according to the colour TV system of the TV. (See page 22.)

on PAL TV: For TVs that can receive PAL signals.

4.43: For TVs that can receive NTSC 4.43 signals.

3.58: For TVs that can receive NTSC 3.58 signals.

Note:

On some TVs, the playback picture may roll up or down; adjust this using the V-HOLD control on the TV. TVs not equipped with a V-HOLD control cannot correct this condition. The playback picture may shrink vertically, and black bars may appear both on the top and bottom of the screen. This does not indicate a malfunction.

- During cue, review, still or slow playback, the picture may not be in colour. Alternatively, the top of the TV screen may be distorted.

Note for only NTSC Playback on PAL system TV

This function is designed to allow only the playback of tapes recorded by NTSC signals on a PAL system TV. The NTSC signal is not completely converted to a PAL signal. For this reason, images played back by this function cannot be recorded correctly on other VCRs.

Other Automatic Functions

Automatic Playback

When a video cassette without an erasure prevention tab is inserted, the VCR starts playback automatically.

VCR-off Playback

When the VCR is off, an inserted video cassette can be played back by pressing **PLAY/OFF** [▶].

Automatic Rewinding

When the tape reaches its end during recording (except for timer recording) or playback, it will automatically be rewound to the beginning.

During OTR, this function will not work.


Automatic Switching Off and Ejection

When the VCR is switched off, an inserted video cassette can be ejected by simply pressing **EJECT**. The VCR will eject the video cassette and automatically turn itself off again.

Before Requesting Service

Before requesting service, check the following points again.

Message of On Screen Display

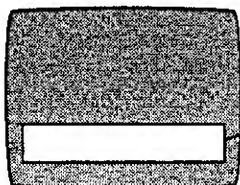

On screen display messages are displayed.

The error message is indicated in brackets [].

[PLEASE PUT IN A VIDEO CASSETTE.]

- ☛ **● REC/OTR (REC ●) or TIMER REC []** has been pressed without a video cassette inserted. Insert a video cassette with an intact erasure prevention tab.

[PLEASE STOP THE TAPE.]

- ☛ **TUNER PRESET** has been selected during playback. Stop the tape.

[PLEASE SET THE CLOCK.]

- ☛ **TIMER REC [], G-CODE or PROG./CHECK** has been pressed when the clock is not set. Set the clock.

[PLEASE USE A CASSETTE WITH TAB.]

- ☛ **● REC/OTR (REC ●) or TIMER REC []** has been pressed without a video cassette with an intact erasure prevention tab. Use a video cassette with an intact erasure prevention tab.

[NO TIMER RECORDING HAS BEEN SET.]

- ☛ **TIMER REC []** has been pressed with no timer programmes. Set timer recording.

[TIMER PROGRAMMES ARE FULL.]

- ☛ **G-CODE** has been pressed when 8 programmes have been already set. Cancel unnecessary programmes.

[VCR IS IN THE TIMER STANDBY MODE.]

- ☛ **POWER ○/I (POWER ○)** has been pressed during the timer standby mode. Press **TIMER REC []** to release the VCR from the timer standby mode.

[DEW FORMED IN THE VCR.]

- ☛ Dew has formed. Wait until the message disappears.

Self-diagnostic Indications

The symptom description is indicated in quotations " ".

This VCR has a self-diagnosis and display function. If the VCR detects trouble during installation or during use, the following indications automatically appear in the VCR display. Indications are in the form of a single English letter plus two numbers, such as [H01].

INDICATION: U10
CAUSE: Dew has formed.
REMEDY: Wait until the indication disappears.

INDICATION: H□□, F□□
CAUSE: Some trouble has occurred. (Numbers after H and F differ according to the status of the VCR.)
REMEDY: Consult Panasonic Customer Care Centre for advice on 132600. (NV-HD630A only)

The VCR will not operate correctly

The symptom description is indicated in quotations " ".

"The VCR display is not illuminated."

- ☛ The mains lead has not been connected. Connect the mains lead to the VCR.
- ☛ Power save setting is **ON**. Set **POWER SAVE** to **OFF**. (See page 23.)

"The VCR display is illuminated but the VCR will not operate."

- ☛ The VCR is in the timer mode. Press **TIMER REC []** to operate the VCR manually.
- ☛ Safety devices are operating. Disconnect the mains lead and wait for 1 minute. Reconnect the mains supply and check functions.
- ☛ Dew may have formed. When the dew indicator flashes, wait until this indicator disappears.

"An unknown language appears on the TV screen."

- ☛ The language setting has been set to an unknown language. Select the desired language. See page 17.

Playback will not operate correctly

The symptom description is indicated in quotations " ".

"The picture is noisy or is not in colour. Horizontal bars or lines run down the screen."

- ☛ Tracking is not correct. Adjust the tracking. See page 5.
- ☛ The TV has not been tuned to the VCR. Tune the TV to the VCR. See page 10.
- ☛ The video heads are clogged or worn. Consult Panasonic Customer Care Centre for advice on 132600. (NV-HD630A only)

Recording will not operate correctly

The symptom description is indicated in quotations " ".


"The "  " indication flashes whenever recording is attempted."

- ✎ The erasure prevention tab on the video cassette has been broken off.
Use a tape with an intact erasure prevention tab, or cover the tab hole with adhesive tape, if the original recording is no longer required.

"The picture is recorded with noise or a blank screen."

- ✎ The aerial or aerial lead is defective.
Check the aerial connection to the VCR. See page 9.
Check your normal TV picture. If there is no picture, check your aerial.
- ✎ The VCR is not correctly tuned.
Retune the VCR. See pages 12-15.
- ✎ A1 or A2 has been selected.
Select the required TV programme.

"Timer recording cannot be performed."

- ✎ The clock or calendar has been incorrectly set.
Check the clock and calendar. Set them to the present time. (Note that this is a 24-hour clock.)
See page 18.
- ✎ The recording starting or ending time setting is incorrect.
Set the recording starting and ending time correctly.
- ✎ The VCR has not been set for timer recording.
Press **TIMER REC**  after programming for timer recording.

"AV external recordings cannot be made."

- ✎ A1 or A2 has not been selected.
Select A1 or A2 by pressing **INPUT SELECT**.
- ✎ External AV connections are incorrect.
Check that the connections for external video and audio sources are correct. See page 35.

The remote controller will not operate correctly

The symptom description is indicated in quotations " ".

"The remote controller does not operate correctly."

- ✎ The remote controller transmitter beam is not reaching the VCR.
Ensure that the remote controller is being pointed at the VCR and that the transmitter beam is not obstructed.
- ✎ The distance is too far.
Use the remote controller within 7 m of the VCR.
If this range is not possible, replace the batteries.
- ✎ The batteries are exhausted.
Replace the batteries. Note the precautions for replacement on page 8.
- ✎ The batteries are incorrectly fitted with (+/-) reversed.
Fit the batteries correctly as shown on page 8.

Usage Precautions

Please read these precautions before you operate this VCR.

Avoid Sudden Changes in Temperature

If the VCR is suddenly moved from a cold to a warm place, dew may form on the tape and inside the VCR. In this case, the "d" dew indicator will flash on and off and the VCR will not operate.

Humidity and Dust

Avoid places where there is high humidity or much dust, which may cause damage to internal parts.

Do Not Obstruct the Ventilation Holes

The ventilation holes prevent abnormal increases in temperature. Do not block or cover these holes. Avoid covering the holes with soft materials such as cloth or paper.

Avoid High Temperature

Keep the VCR away from extreme heat sources such as direct sunlight, heating radiators, or closed automobiles.

Avoid Magnets or Magnetized objects

Never bring a magnet or magnetized object near the VCR as it will adversely affect its performance of the VCR. Keep the VCR away from other equipments as much as possible when using it, avoid any adverse effect on performance for both the VCR and the equipment.

Do Not Place Fingers or Other Objects Inside

Do not attempt to disassemble the VCR. Touching internal parts of this VCR is dangerous, and may cause it serious damage. There are no user serviceable parts inside.

Avoid Water

Keep the VCR away from flower vases, tubs, sinks, etc. If liquids are spilled into the VCR, serious damage could occur. If you spill any liquid into the VCR, consult qualified service personnel.

Lightning

To avoid damage by lightning, disconnect the aerial plug from the VCR.

Cleaning the VCR

Wipe the VCR with a clean, dry cloth. Never use cleaning fluid or other chemicals. Do not use compressed air to remove any dust.

Stacking

Place the VCR in a horizontal position, and do not place anything heavy on it.

If Dew Forms in the VCR

Dew may form in the VCR if:

- The VCR is in a room where the heater has just been turned on.
- The VCR is in a room with steam or high humidity.
- The VCR is brought from cold surroundings into a well-heated room.
- The VCR is suddenly brought from cool surroundings, such as an air-conditioned room or car, to a place which is hot and humid.

When dew forms in the VCR, the "d" dew indicator on the display flashes on and off (The self test indicator "U10" will also appear in the VCR display.) and all the function buttons are made non-operational to protect the tape and the video heads. When the dew indicator flashes, wait until this indicator disappears.

- If dew forms inside the VCR while the VCR is off, it will turn on automatically and the dew indicator will flash on and off. As soon as the dew disappears, the VCR will turn itself off again.

Dirt on the video heads

If the video heads get dirty, pictures will not be recorded or played back clearly.

(See the following conditions.)

Normal picture



Small amount of dirt



Large amount of dirt



If this happens, clean the video heads with a commercially available cleaning cassette.

If the problem still persists after performing above, contact a service personnel to request assistance.

Head cleaning by service agents is not covered by warranty.

Specifications

NV-HD630A/EA

Power Source:	220-240 V AC 50/60Hz
Power Consumption:	18 W (NV-HD630A) 19 W (NV-HD630EA)

Video Recording System:	4 rotary heads, helical scanning system
Video Heads:	4 heads
Audio Heads:	2 heads
Tape Speed:	PAL SP; 23.39 mm/s LP; 11.7 mm/s NTSC SP; 33.3 mm/s EP; 11.1 mm/s
Tape Format:	VHS tape
Record/Playback Time:	PAL SP; 240 min with NV-E240 PAL LP; 480 min with NV-E240
FF/REW Time:	Approx. 60 s with NV-E180

VIDEO

Television System:	CCIR; 625 lines, 50 fields, PAL colour signal EIA; 525 lines, 60 fields, NTSC colour signal
Modulation System:	Luminance; FM azimuth recording Colour signal; converted subcarrier phase shift recording
Input Level:	VIDEO IN (PHONO); 1.0 Vp-p, 75 ohm, terminated
Output Level:	VIDEO OUT (PHONO); 1.0 Vp-p, 75 ohm, terminated RF modulated; UHF channel AU28-69 (NV-HD630A), 75 ohm NZ21-69 (NV-HD630EA), 75 ohm

AUDIO

Input Level:	AUDIO IN (PHONO); -6 dBV, more than 47 kohm
Output Level:	AUDIO OUT (PHONO); -6 dBV, less than 1 kohm
Audio Track:	1 track (normal-mono only), 2 channels (Hi-Fi sound-stereo)

Video Horizontal Resolution:	Colour; more than 240 lines (SP)
Signal-to-Noise Ratio:	Video; more than 43 dB (SP)
Dynamic Range	Audio; more than 90 dB (Hi-Fi audio track)
Audio Frequency Response:	20 Hz-20 kHz/Hi-Fi
Wow and Flutter:	0.005% Wrms/Hi-Fi
Operating Temperature:	5°C-40°C
Operating Humidity:	35%-80%
Weight:	3.9 kg
Dimensions:	430 (W)×87 (H)×300 (D) mm
Standard Accessories:	1 pc. RF coaxial cable 1 pc. remote controller 1 pc. audio video cable 2 pcs. "R6" size batteries 1 pc. AC mains lead

Weight and dimensions shown are approximate.
Specifications are subject to change without notice.

Note to electrical appliance dealers only

To Demonstrate "Programme List Search"

- 1 Eject a video cassette, if it has been inserted.
- 2 Keep pressing **SEARCH** on the remote controller for at least 5 seconds.
- 3 Then, the demonstration mode will be displayed on the TV screen.
- 4 Press **MENU** to stop the demonstration.


SEARCH



MENU



On Screen Display

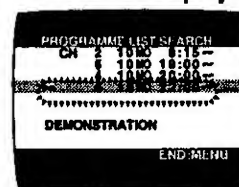

Printed in Japan

☐
X0999M0 ()

Matsushita Electric Industrial Co., Ltd.
Central P.O.Box 288, Osaka 530-91, Japan